CQUBE SERIES

PROGRAMMING MANUAL

PM_EN

Part No.: 1764073_01

CONTENT

CONTENT 2
ACTIVATE WITH CARD 3
Activate programming with technical service card 3
Programming buttons 4
MAIN MENU 5
Pay system menu 5
Jug beverage 5
PROGRAMMING 6
Clean machine 6
Counters 7
Beverage setup, Strength 9
Beverage setup, Volume 10
Beverage setup, Drink Settings 11
Beverage setup, Water/Recipe Bank 12
Beverage setup, Enable Beverage 13
Jug setup 14
Calibration 15
Machine settings 17
Language setup and set time/day 19
Hardware test 20
Factory reset 25
Expert settings 26
Time schedule (Energy Mode) 27
Pay system 28
Cashflow 29

Some important information may appear in textboxes seen below

IMPORTANT!
INFO.

CAUTION!
INFO.

More INFO.

Note INFO.

ACTIVATE WITH CARD

Freshbrew / Espresso

Activate programming with technical service card

- Insert technical card in the card reader (A)
- The display indicates

CQube SF

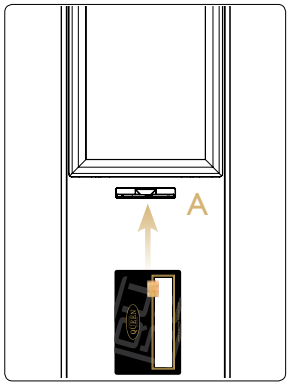

CQube MF & LF

CQube Series with membrane switch

- Service Menu Jug Beverage
- Service Menu Clean Machine
- Service Menu Counters
- Service Menu Beverage Setup
- Service Menu Jug Setup
- Service Menu Calibration
- Service Menu Machine Settings
- Service Menu Language Setup
- Service Menu Set Time/Day
- Service Menu Hardware Test
- Service Menu Factory Reset
- Service Menu Expert Settings
- Service Menu Time Schedule

CQube Series with touch display

Press any icon to enter the menu.

Press button to scroll between the different menus

ACTIVATE WITH CARD

Freshbrew / Espresso

Programming buttons

Touch Display	Membrane Switch	Description
		Press this button if you wish to leave the submenu and return to the main menu.
		Press the ENTER button if you want to enter a menu, alter the value or a setting. Alter a value by pressing the or button. Confirm the new setting by pressing the E-button.
		Press this button if you wish to increase a value or go forward in the menu.
		Press this button if you want to reduce a value or go back in the menu.
		Press the STOP button if you wish to return to the service menu. ENERGY SAVING MODE button. Keep the STOP button pressed down for 5 seconds. The display shows; Energy Saving Mode. To return to normal setting, keep the Stop button pressed down for 5 sec. ENERGY SAVING MODE, the machine switches off the front display and decreases the temperature in the water tank to 65°C.

Freshbrew / Espresso

Pay system menu

These menus will only be visible if the machine has any pay system installed.

- Service Menu Free Vending
- Service Menu Free Vend Off
- Service Menu Load Vend Key
- Service Menu Cashflow

Press button to scroll between the different menus

Jug beverage

How to dispense a decanter of a drink.

Service Menu Jug Beverage

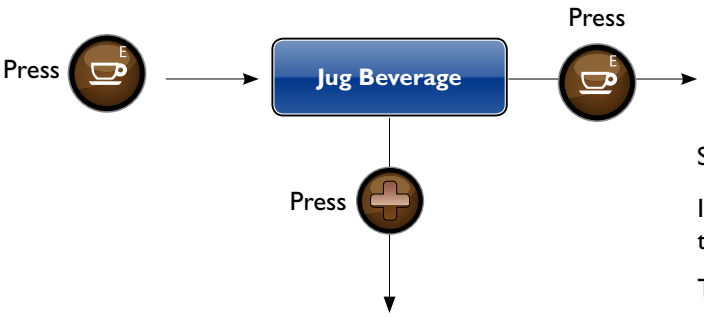

Press desired drink to start the jug.

Select the number of cups to be brewed in jug

If no selection is made, remove the technical card to return the default mode.

To stop a jug process press the STOP button, machine will finish the drink in progress before it stops.

Freshbrew / Espresso

Clean machine

Perform cleaning of the machine.

Cleaning hot key

See maintenance manual for detailed information about the cleaning programs.

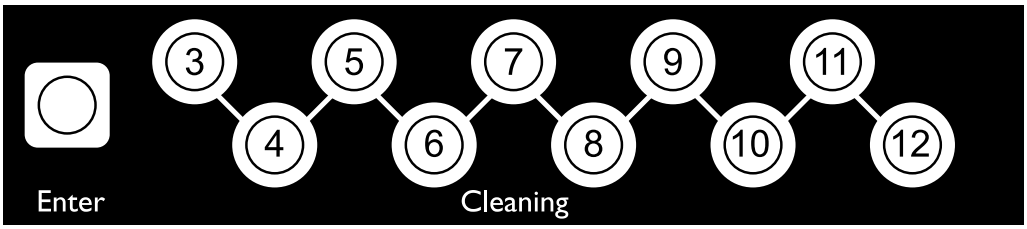

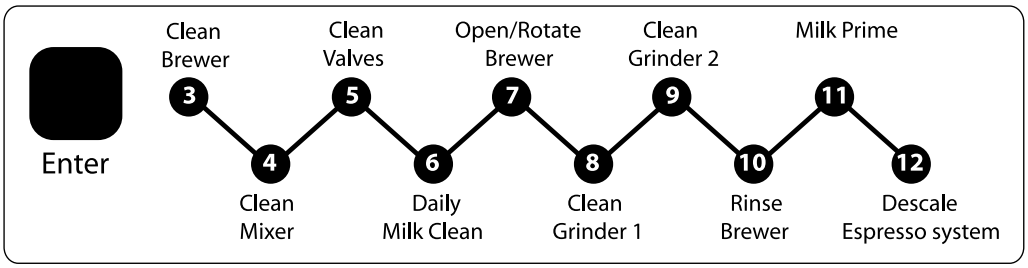

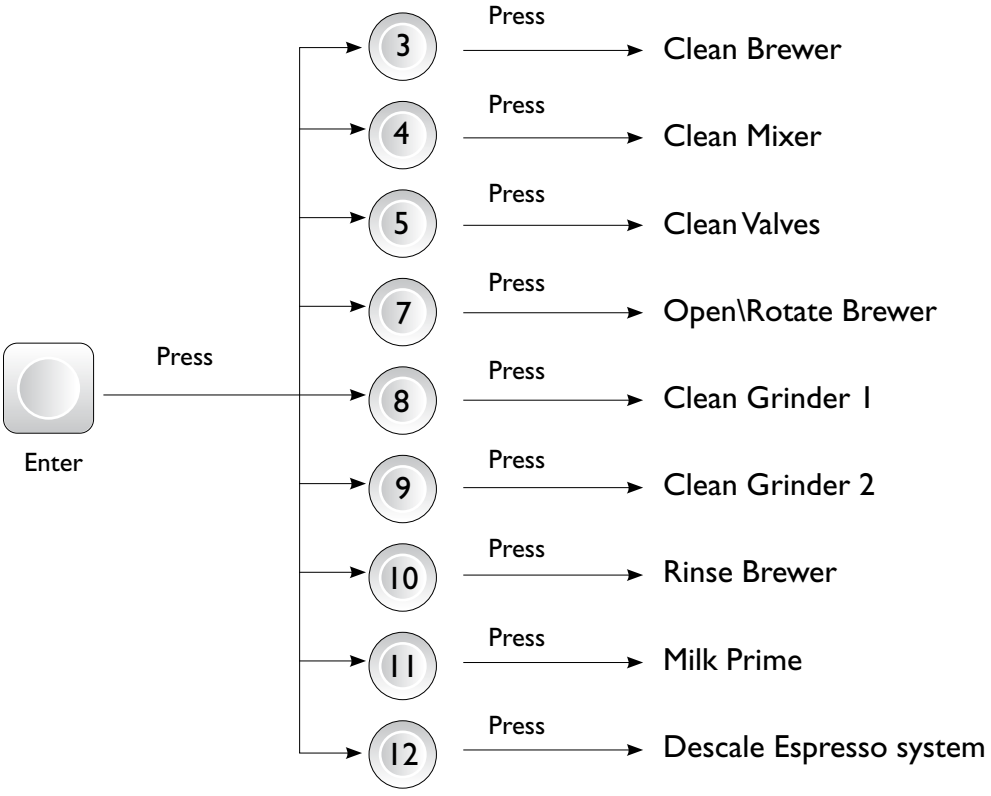

Freshbrew / Espresso

Counters

See the counter of each drink or total counters for all drinks. It's also possible to reset the drink counters.

Service Menu Counters

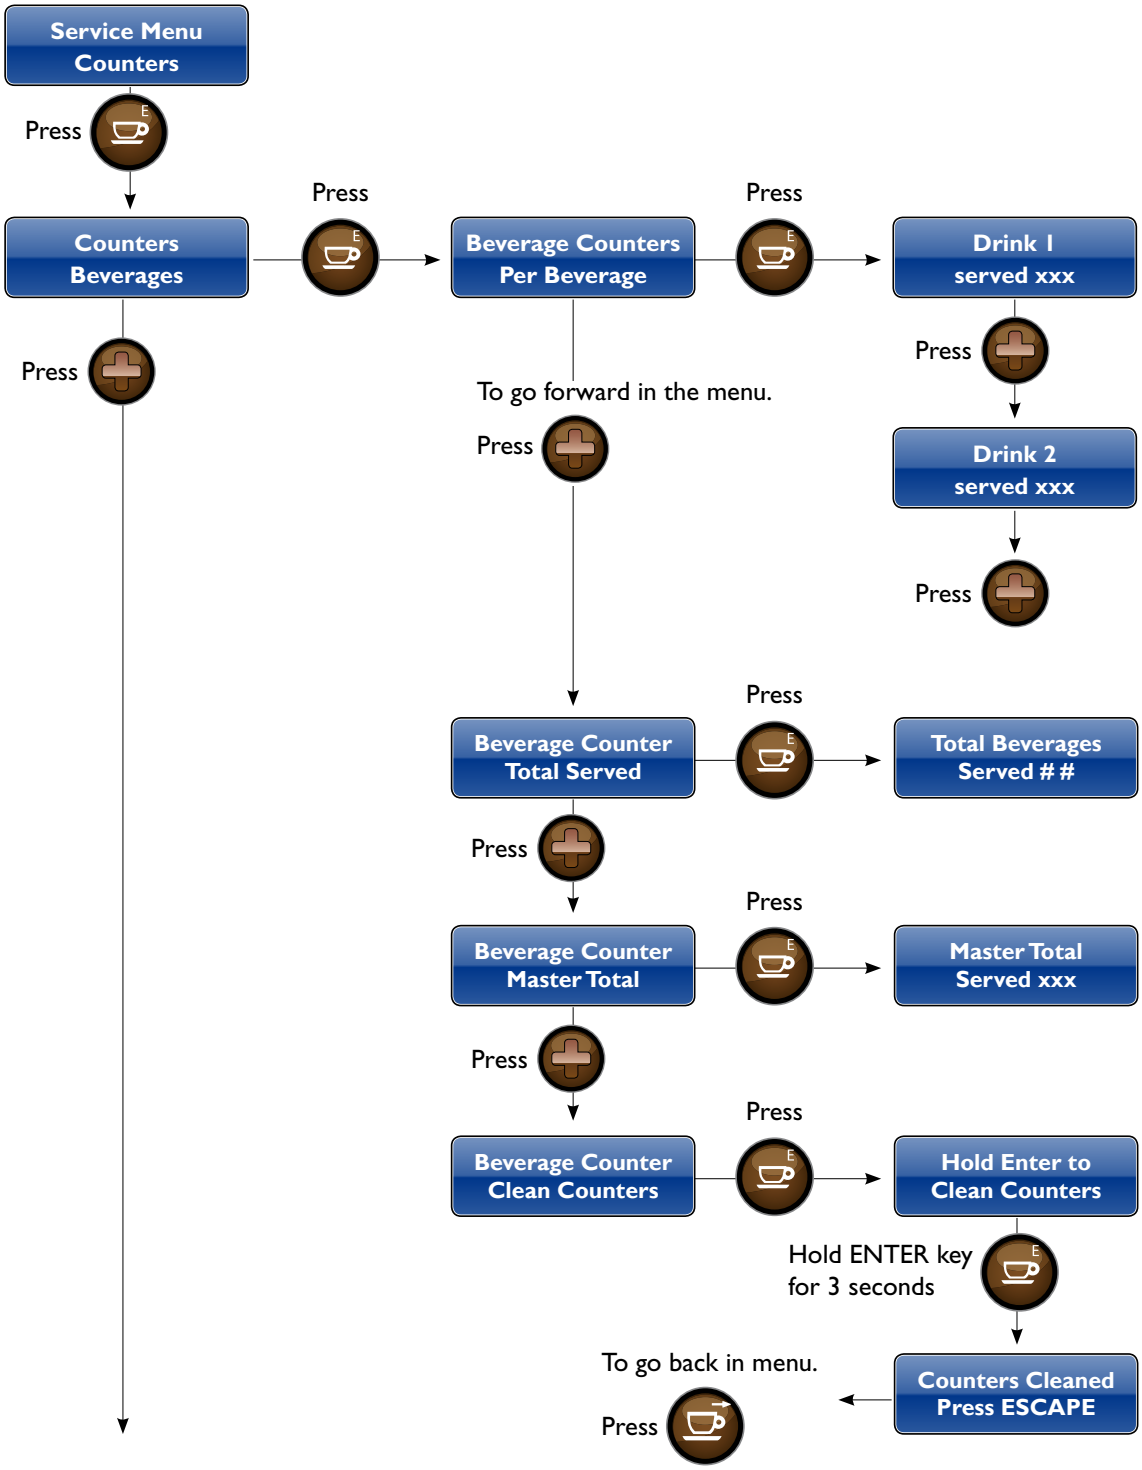

Freshbrew / Espresso

Counters

See the number of times cleaning has been performed or reset the clean counter.

Service Menu
Counters

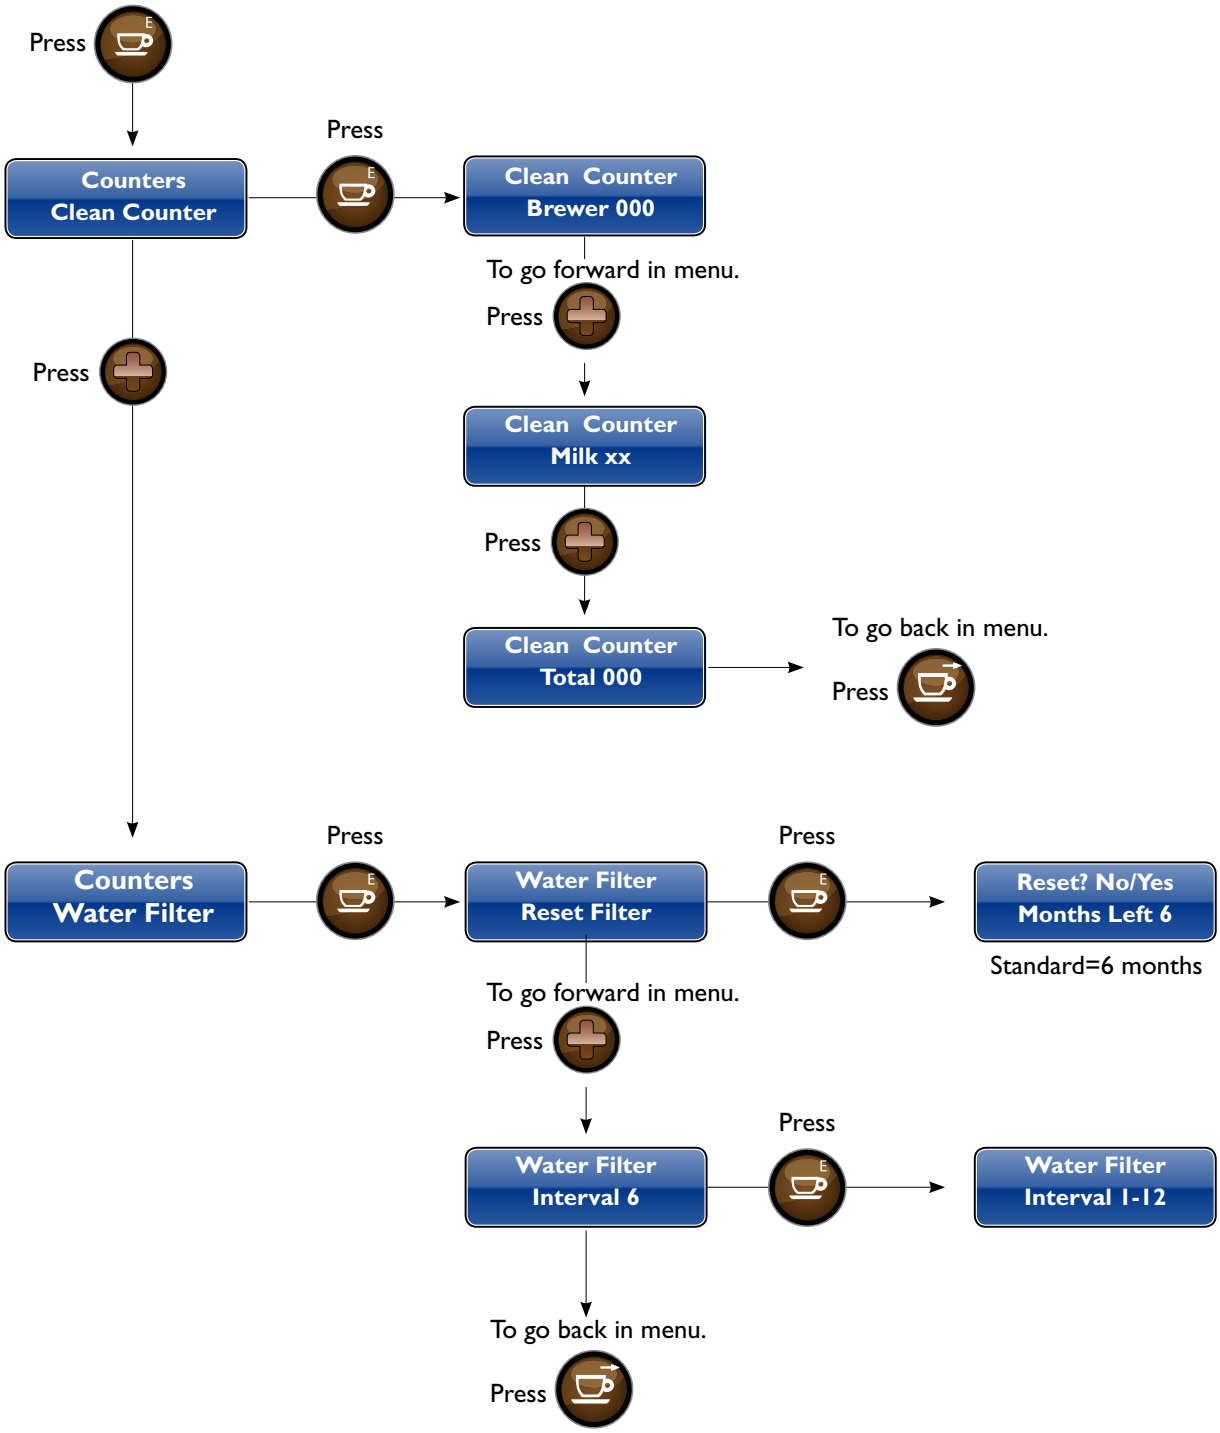

Freshbrew / Espresso

Beverage setup, Strength

Change strength of the different drinks.

Service Menu
Beverage Setup

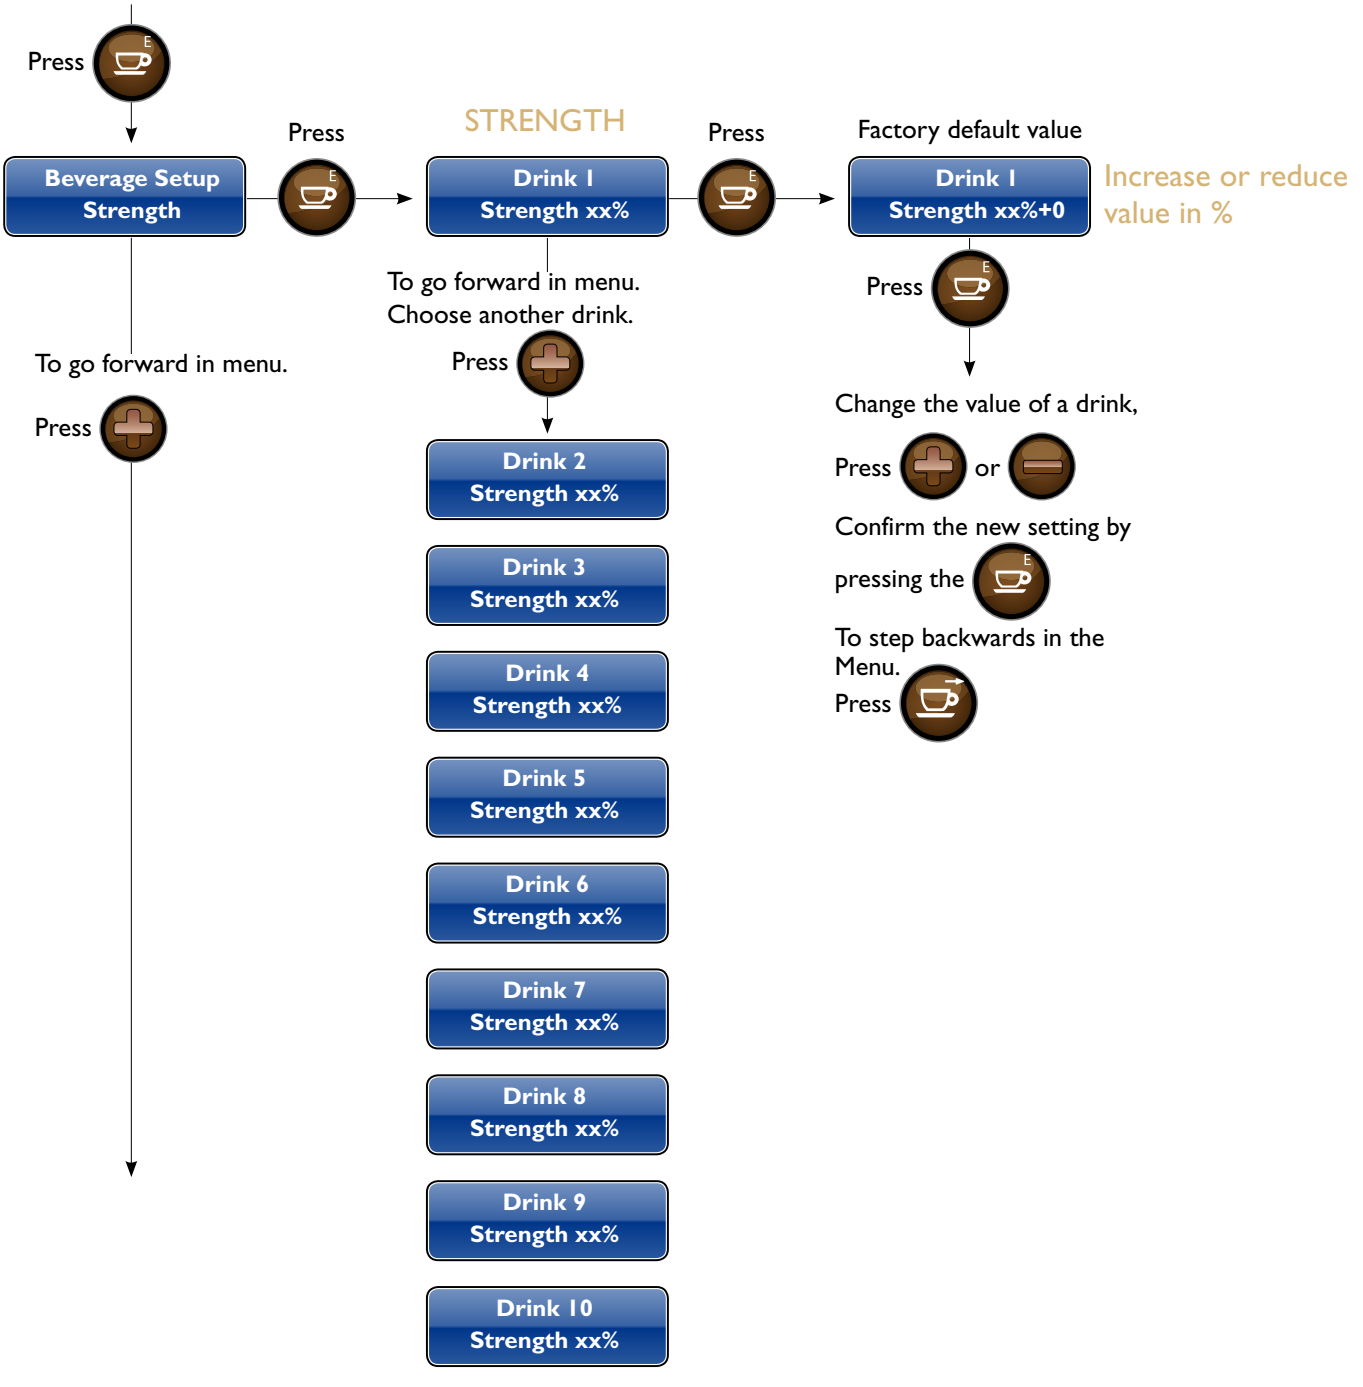

Freshbrew / Espresso

Beverage setup, Volume

Change strength and volume of the different drinks.

Service Menu
Beverage Setup

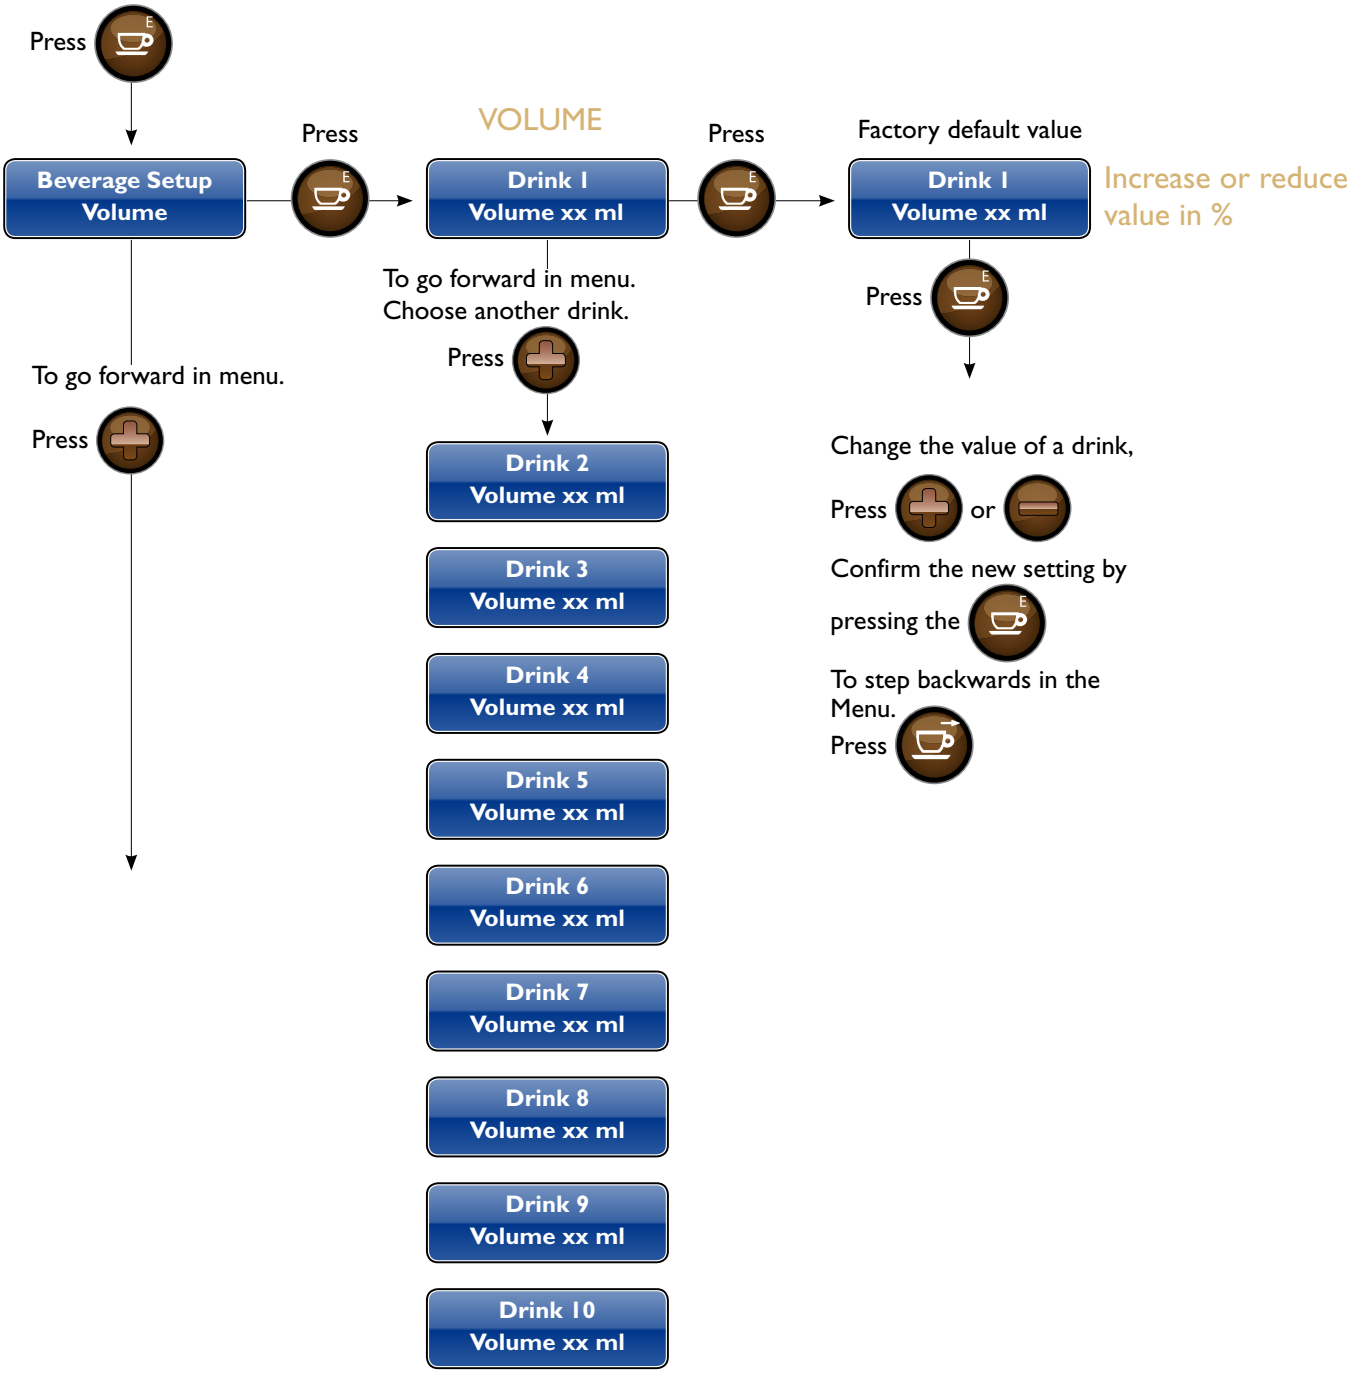

Freshbrew / Espresso

Beverage setup, Drink Settings

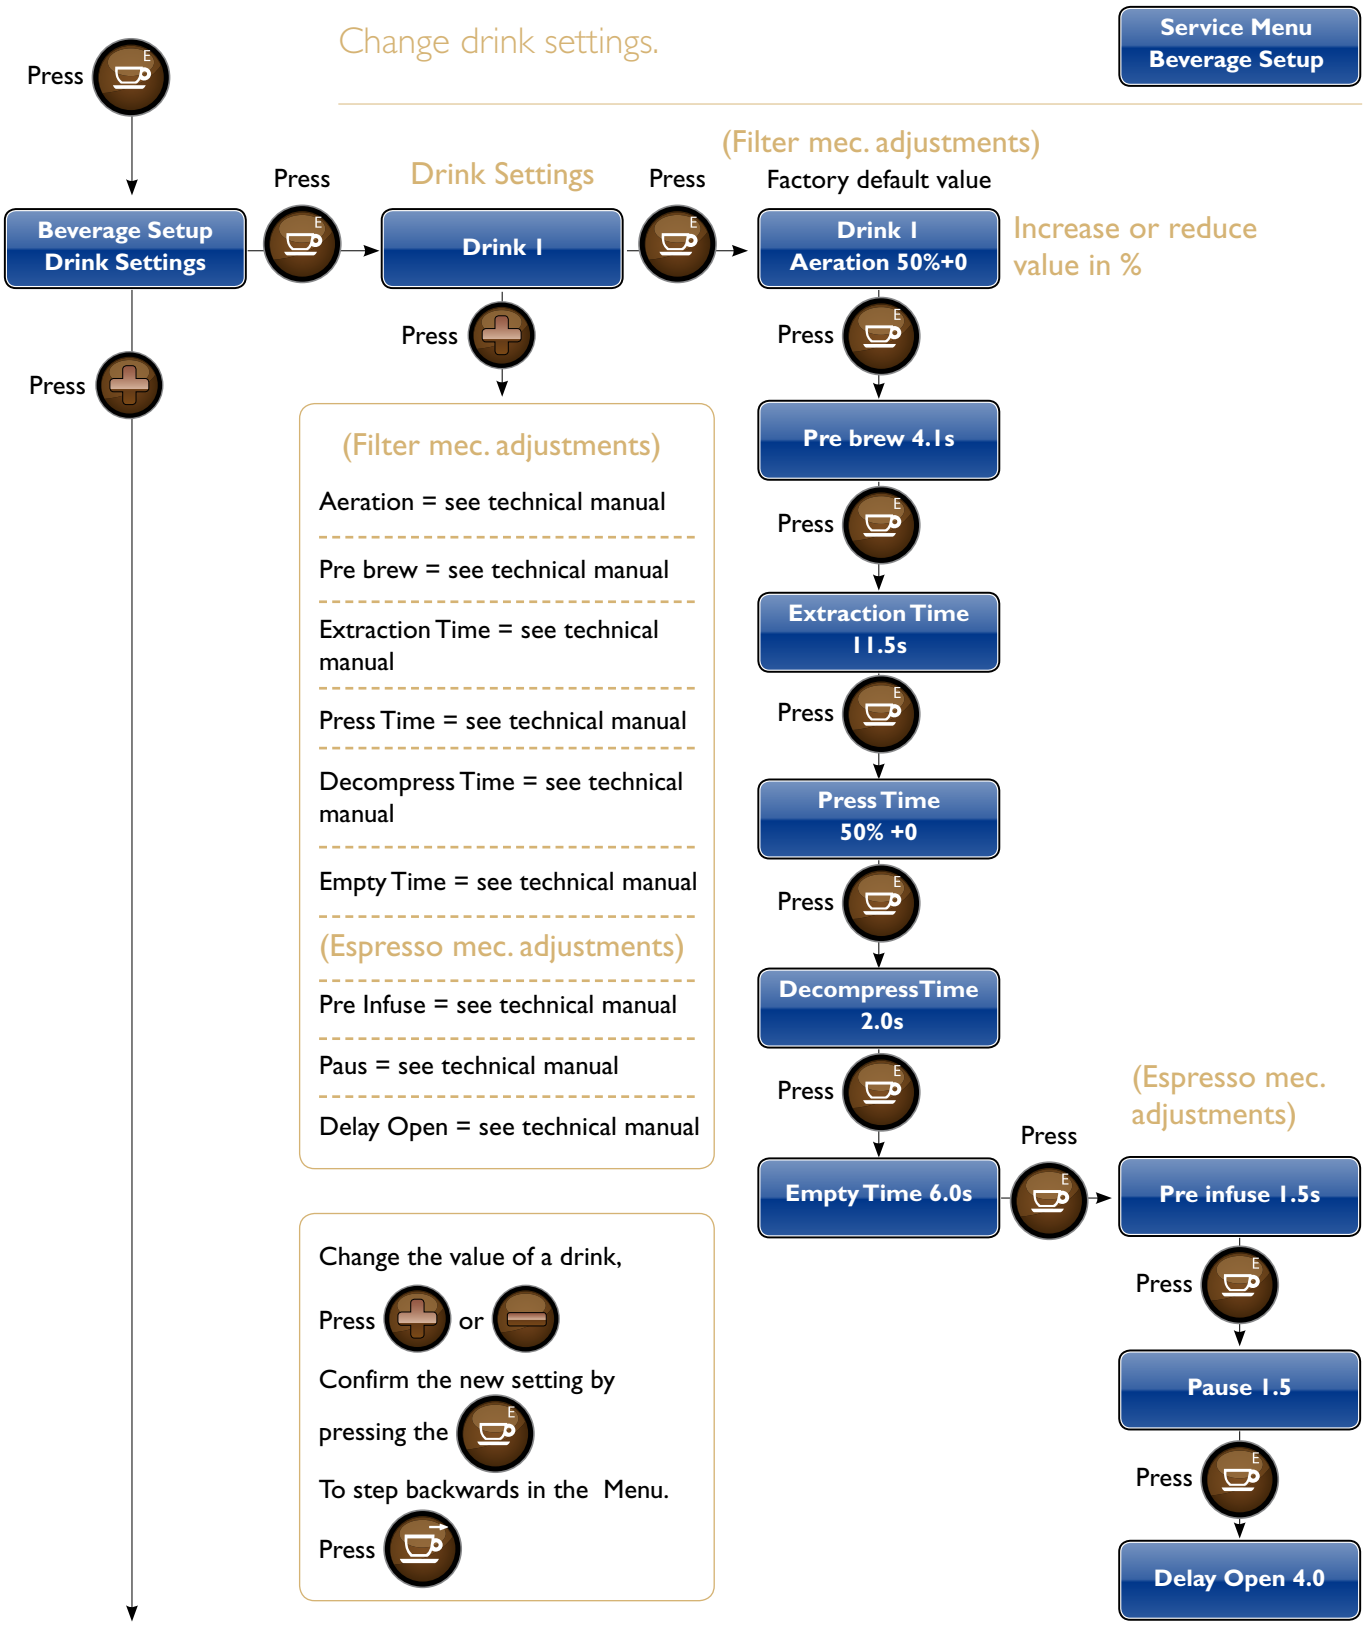

Freshbrew / Espresso

Beverage setup, Water/Recipe Bank

Turn the water ON/OFF and enter recipe bank.

Beverage Setup
Water <On/Off>

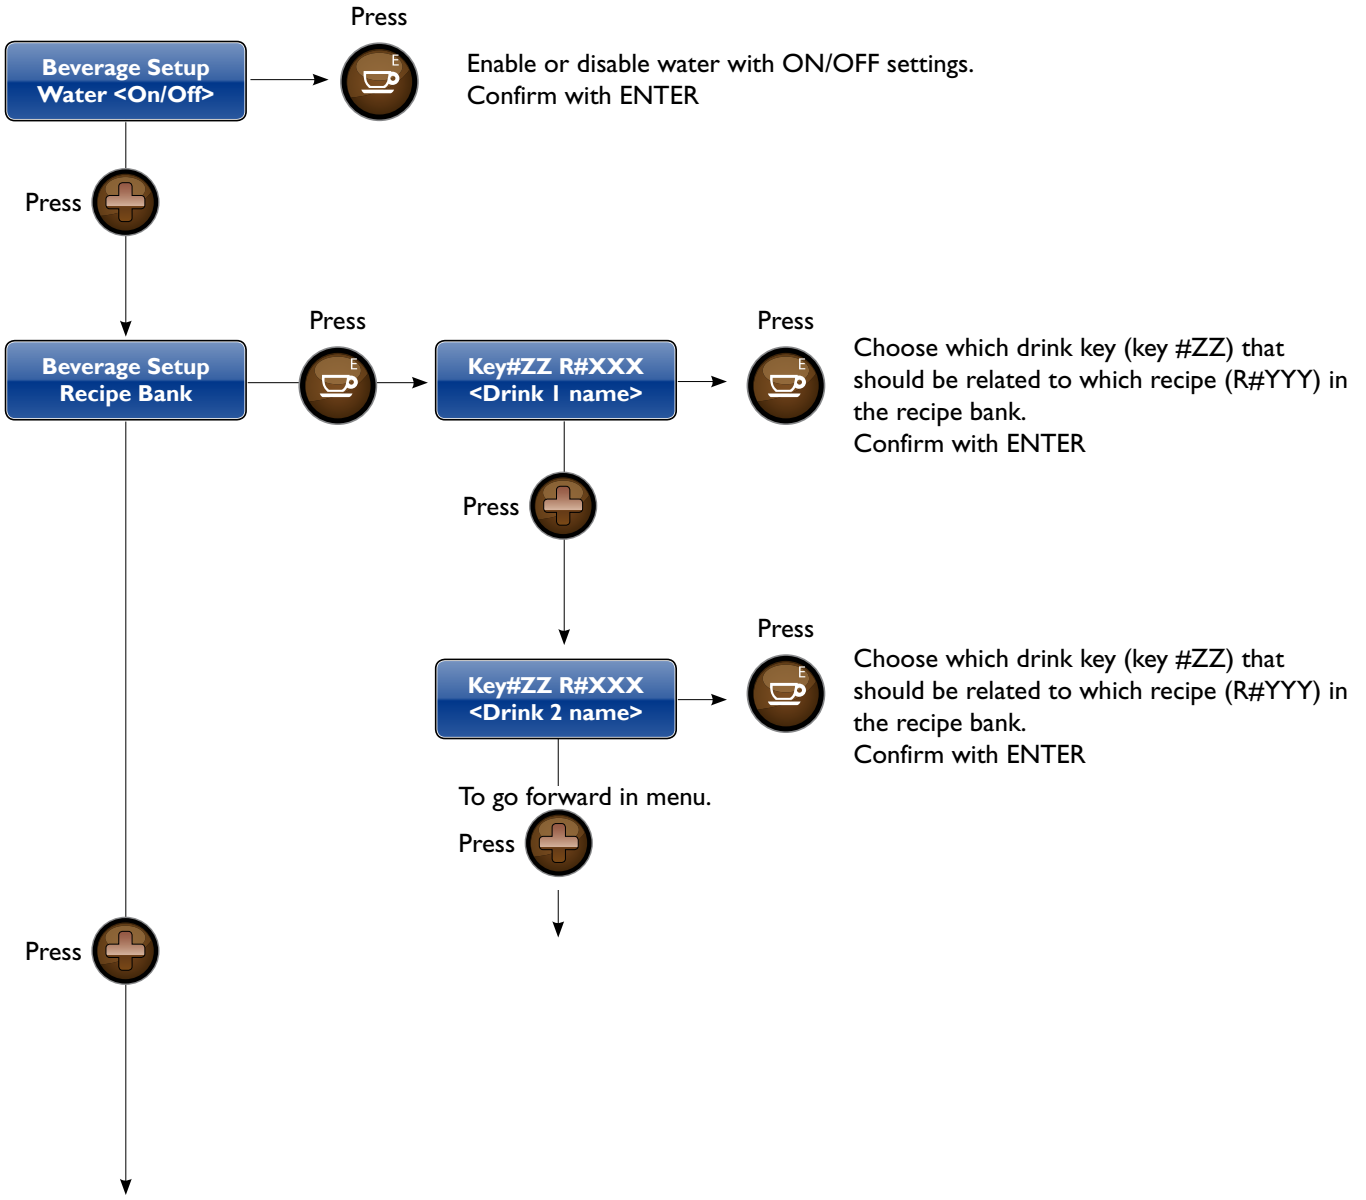

Freshbrew / Espresso

Beverage setup, Enable Beverage

Enable or disable different drinks.

Service Menu
Beverage Setup

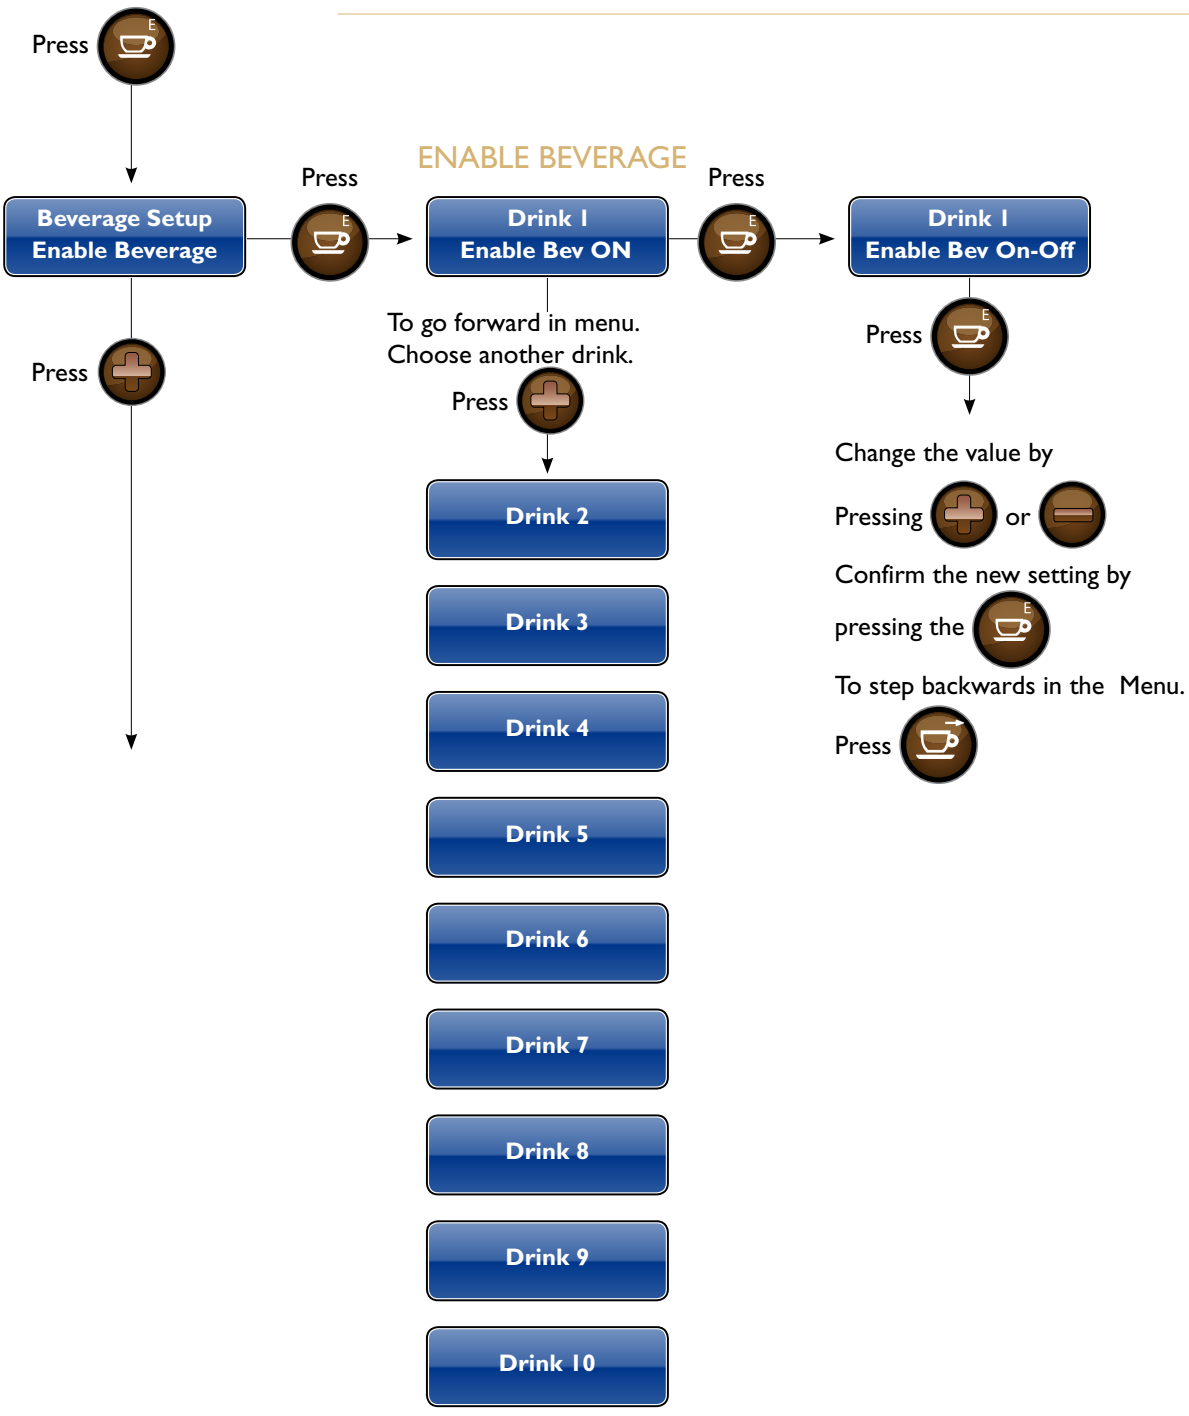

Freshbrew / Espresso

Jug setup

Change the number of cups for standard jug.

Service Menu
Jug Setup

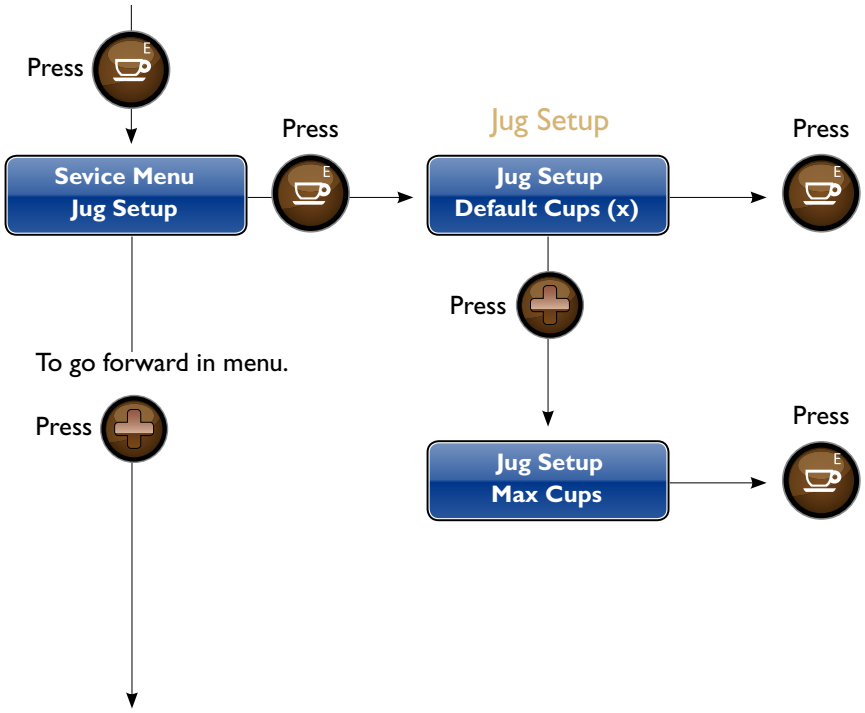

Choose the amount of cups to be used as standard when you enter Jug Mode. Confirm with ENTER

Choose the maximum allowed amount of cups to be used when brewing into a jug, Value set here rules the maximum allowed cups in "Defaut cups" choice above.
Confirm with ENTER

Freshbrew / Espresso

Calibration

Change calibration settings of the machine.

Service Menu
Calibration

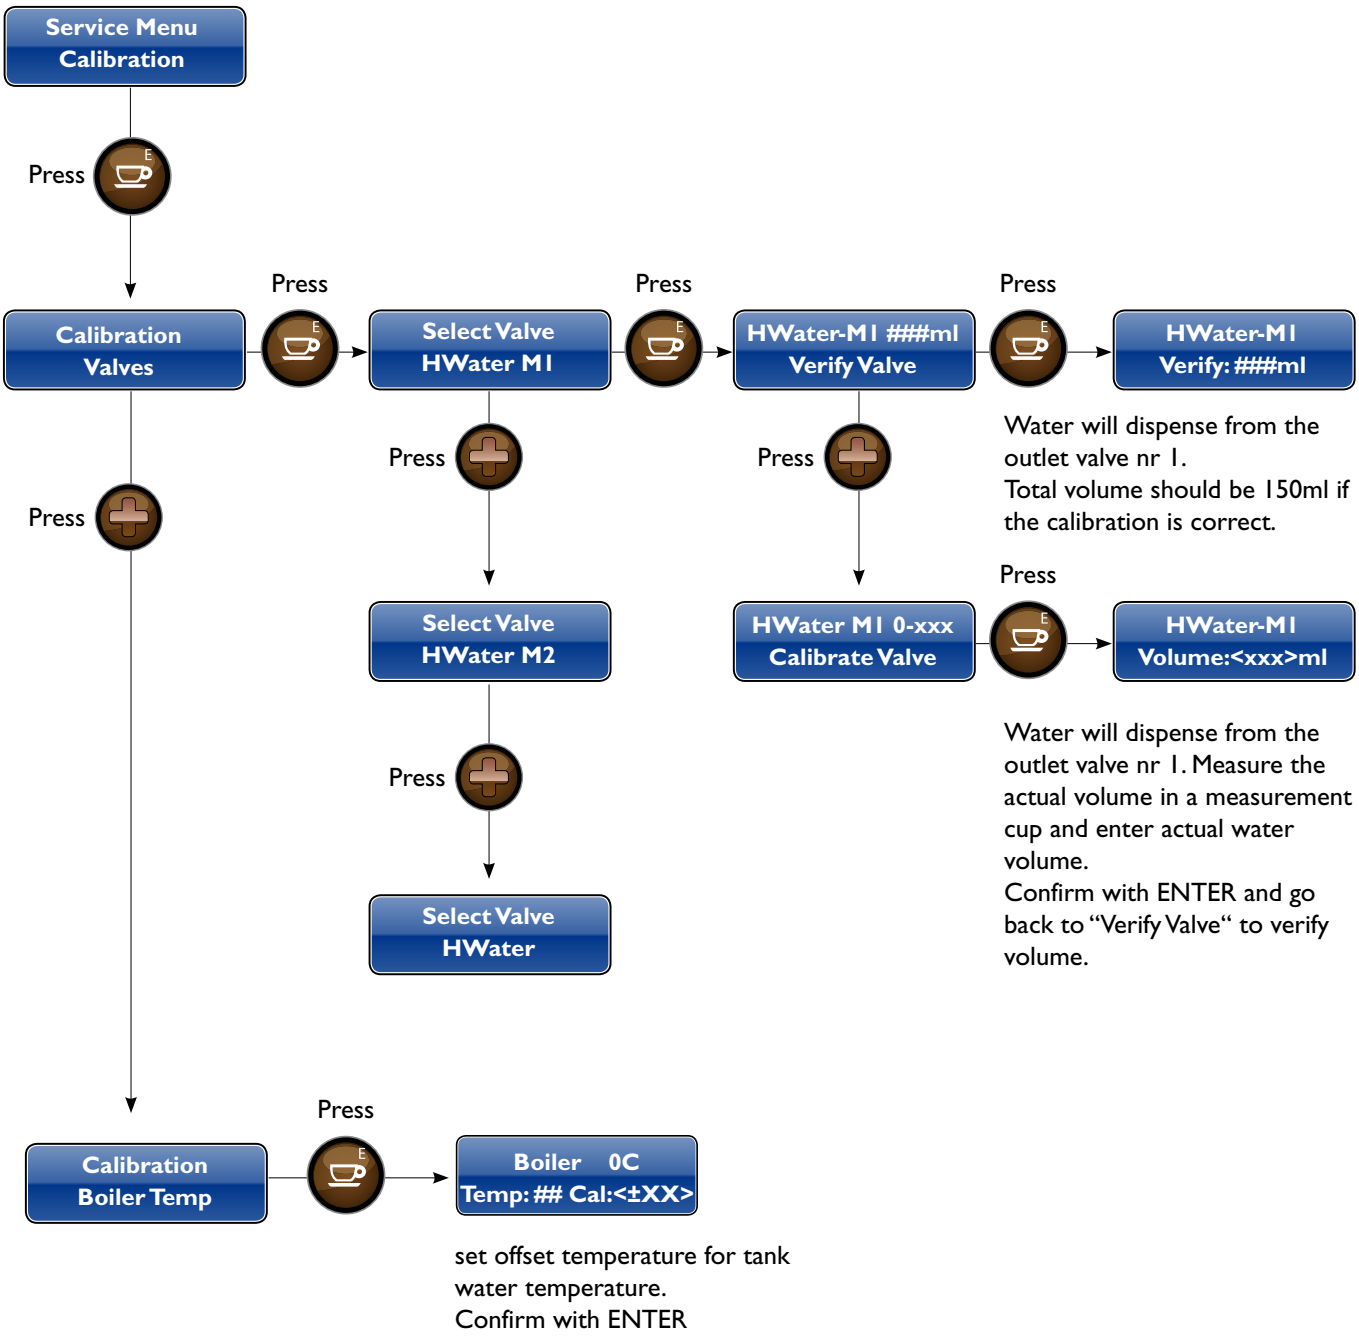

Freshbrew / Espresso

Calibration

Change calibration settings of the machine.

Service Menu
Calibration

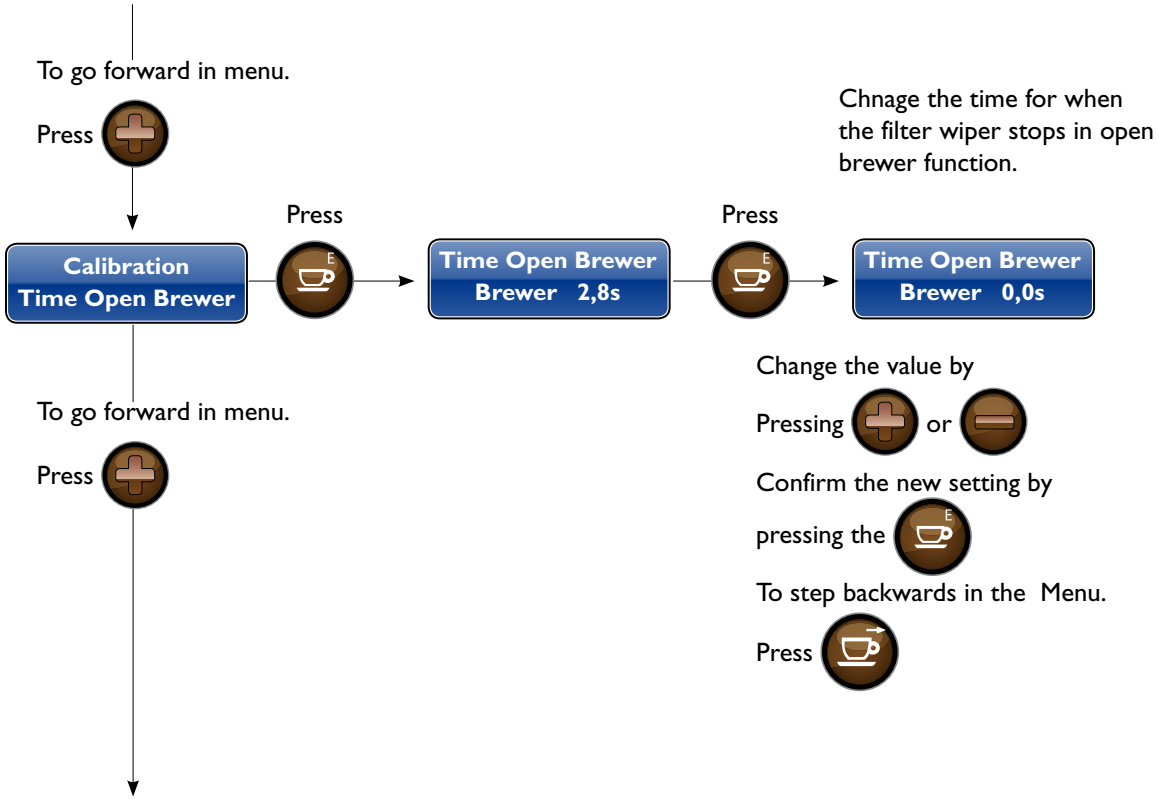

Freshbrew / Espresso

Machine settings

Change Machine Settings.

Service Menu
Machine Settings

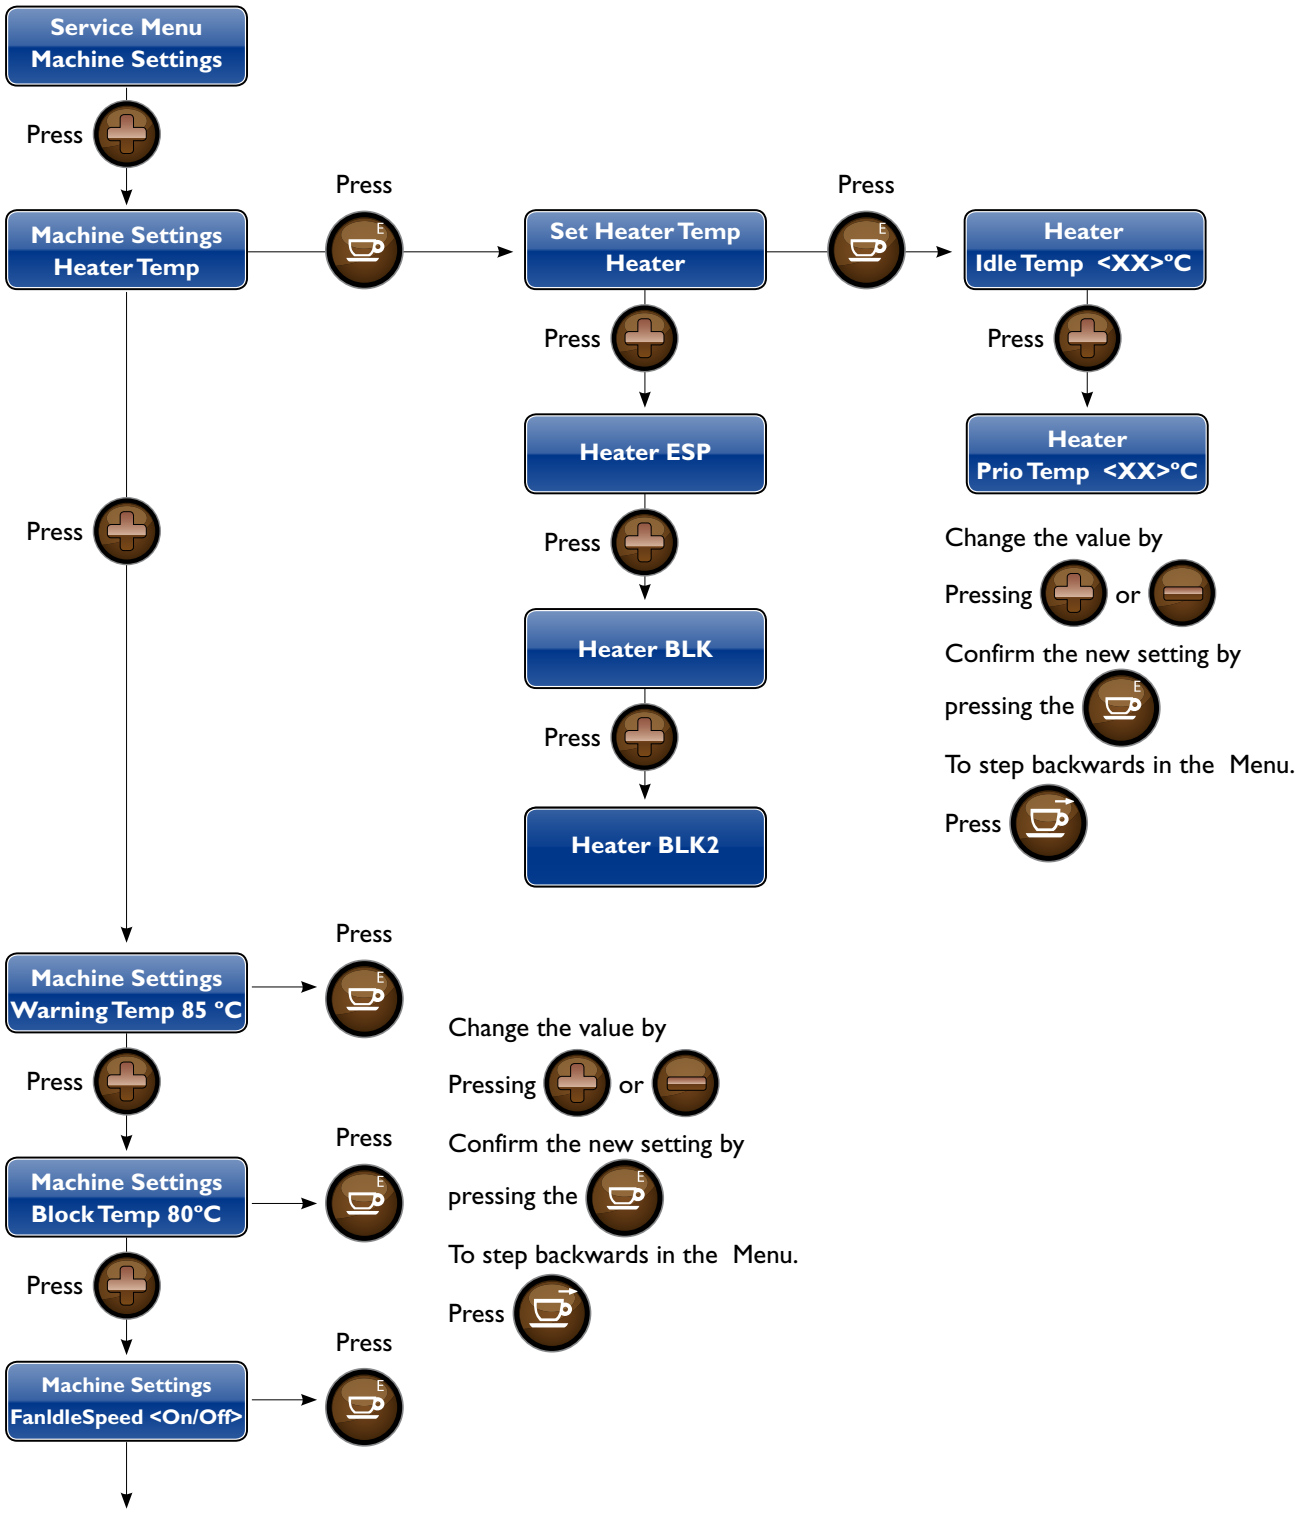

Freshbrew / Espresso

Machine settings

Change Machine Settings.

Service Menu
Machine Settings

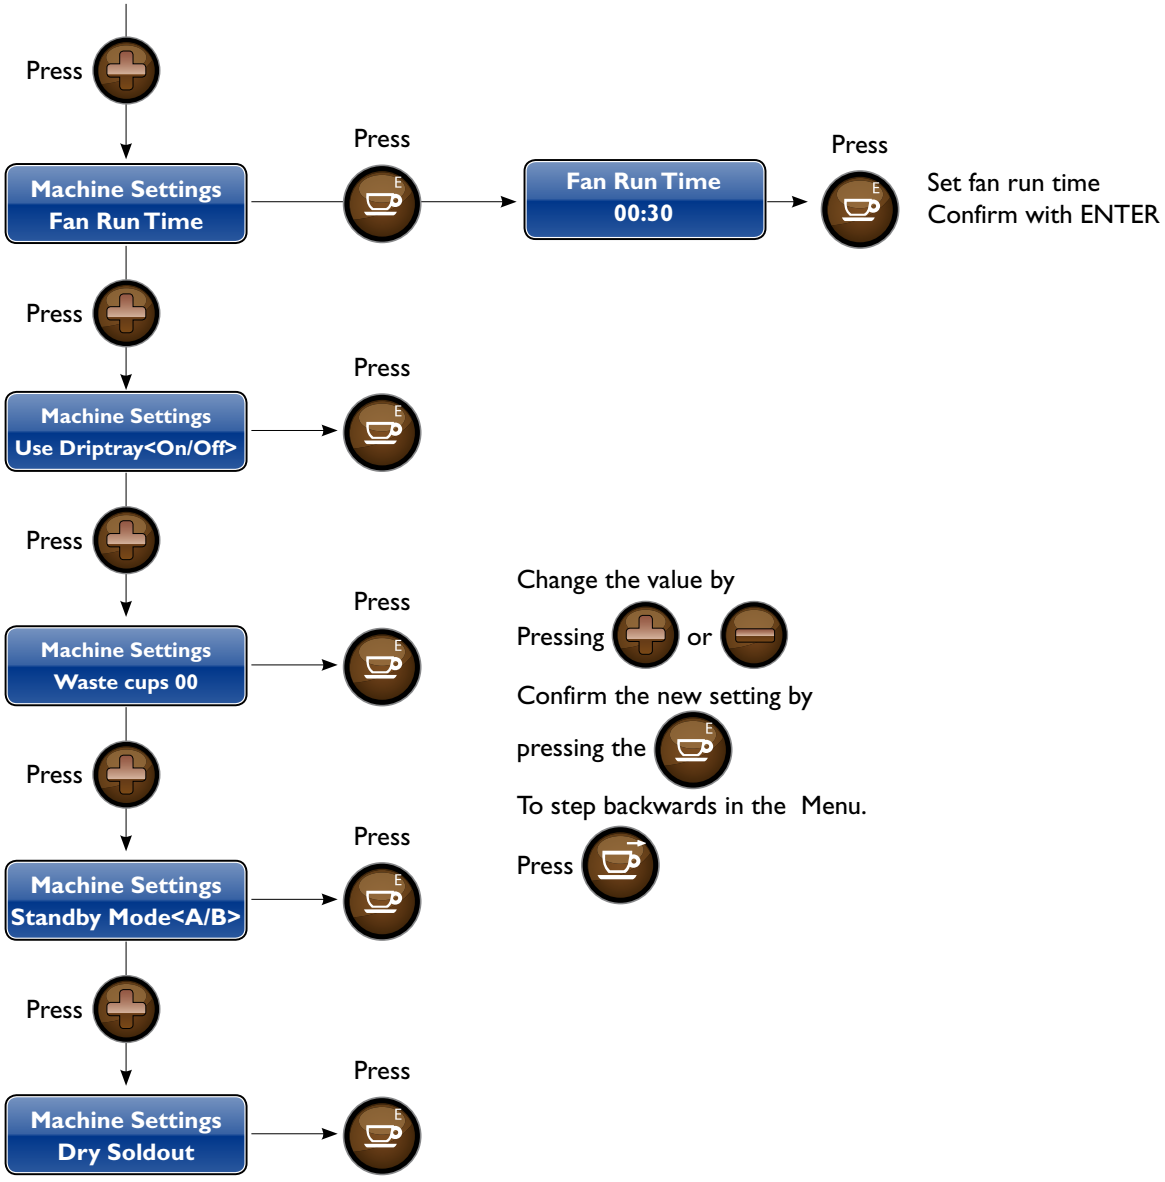

Freshbrew / Espresso

Language setup and set time/day

Change language or update time/day.

Service Menu
Language Setup

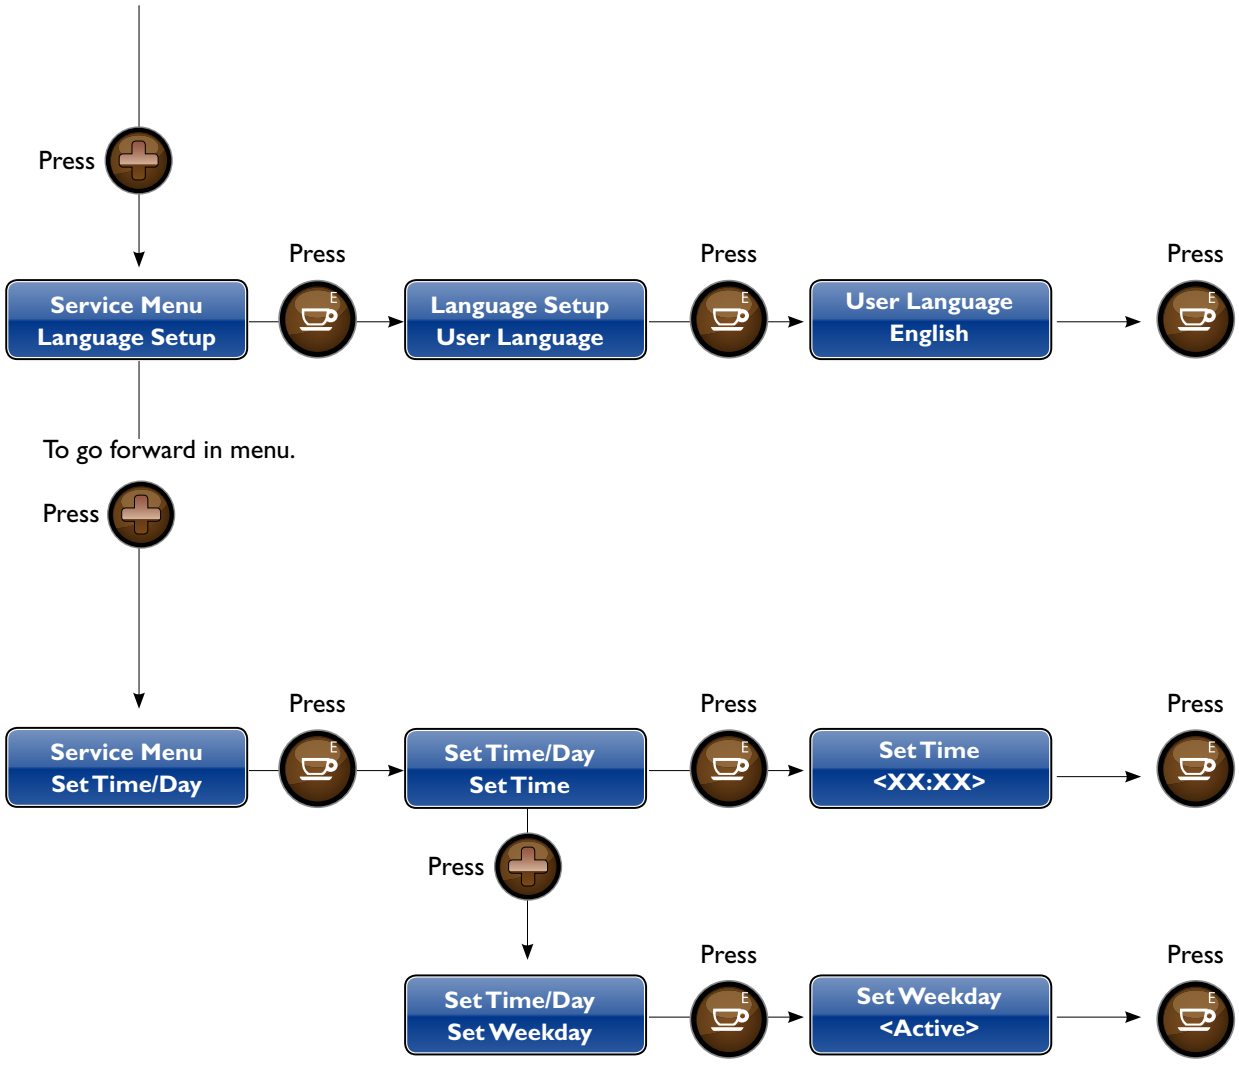

Freshbrew / Espresso

Hardware test

Test different components in the machine.

Service Menu
Hardware Test

Warning!
When opening any valves the machine will dispense hot water, please place a jug under the outlets to avoid spilling of water.

Freshbrew / Espresso

Warning: when opening any valves the machine will dispense hot water, please place a jug under the outlets to avoid spilling of water.

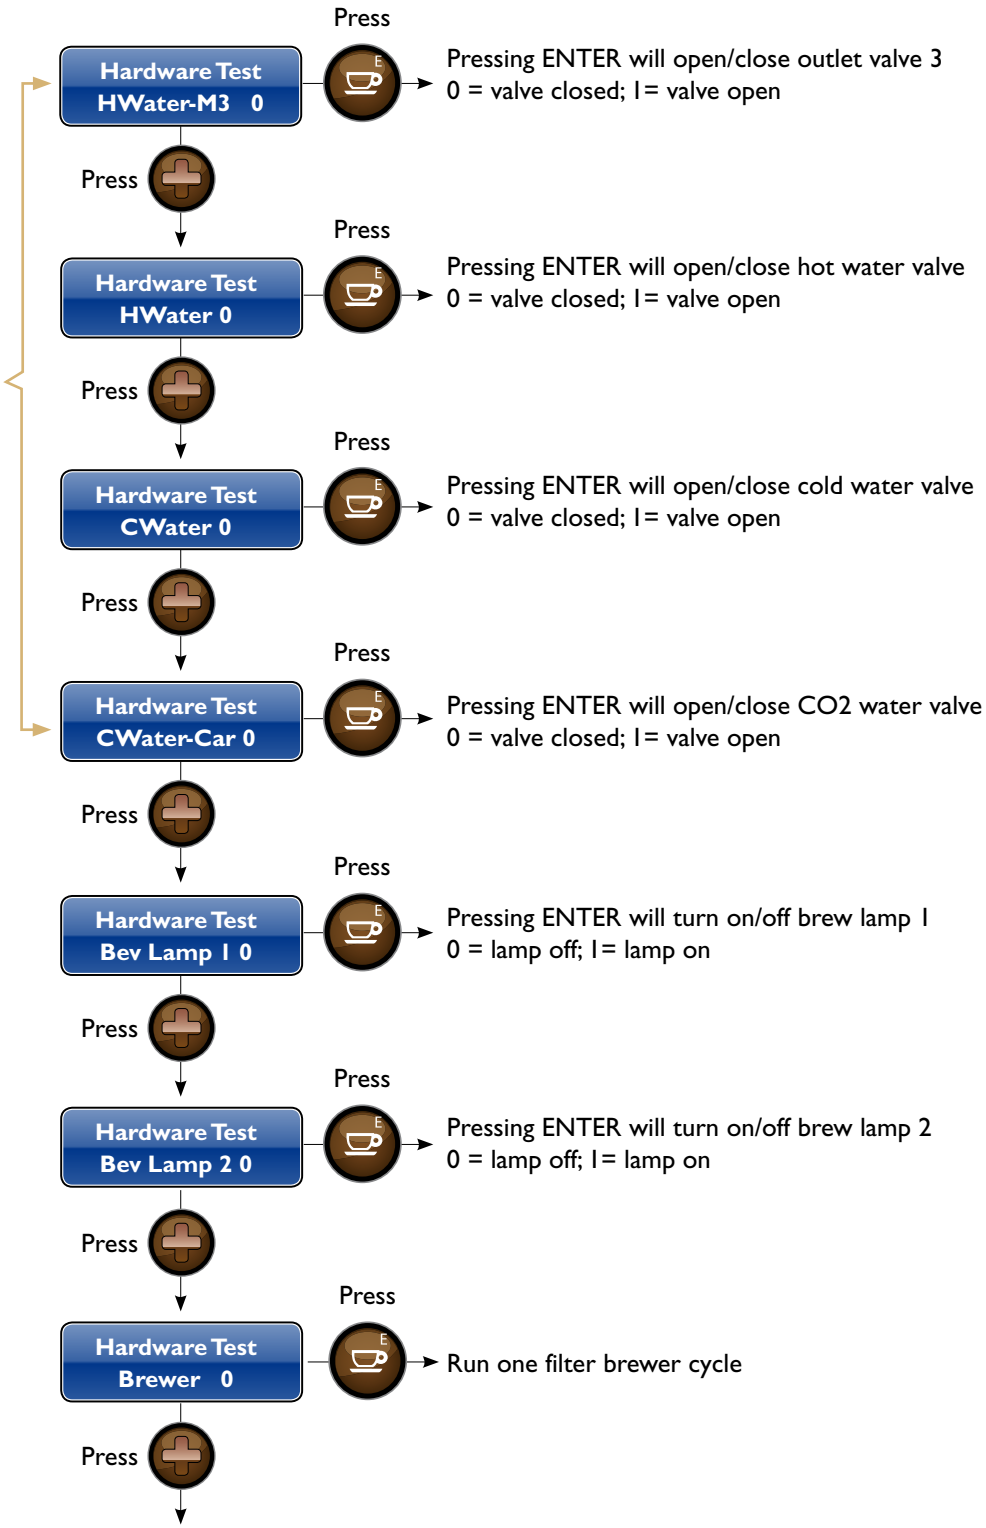

Freshbrew / Espresso

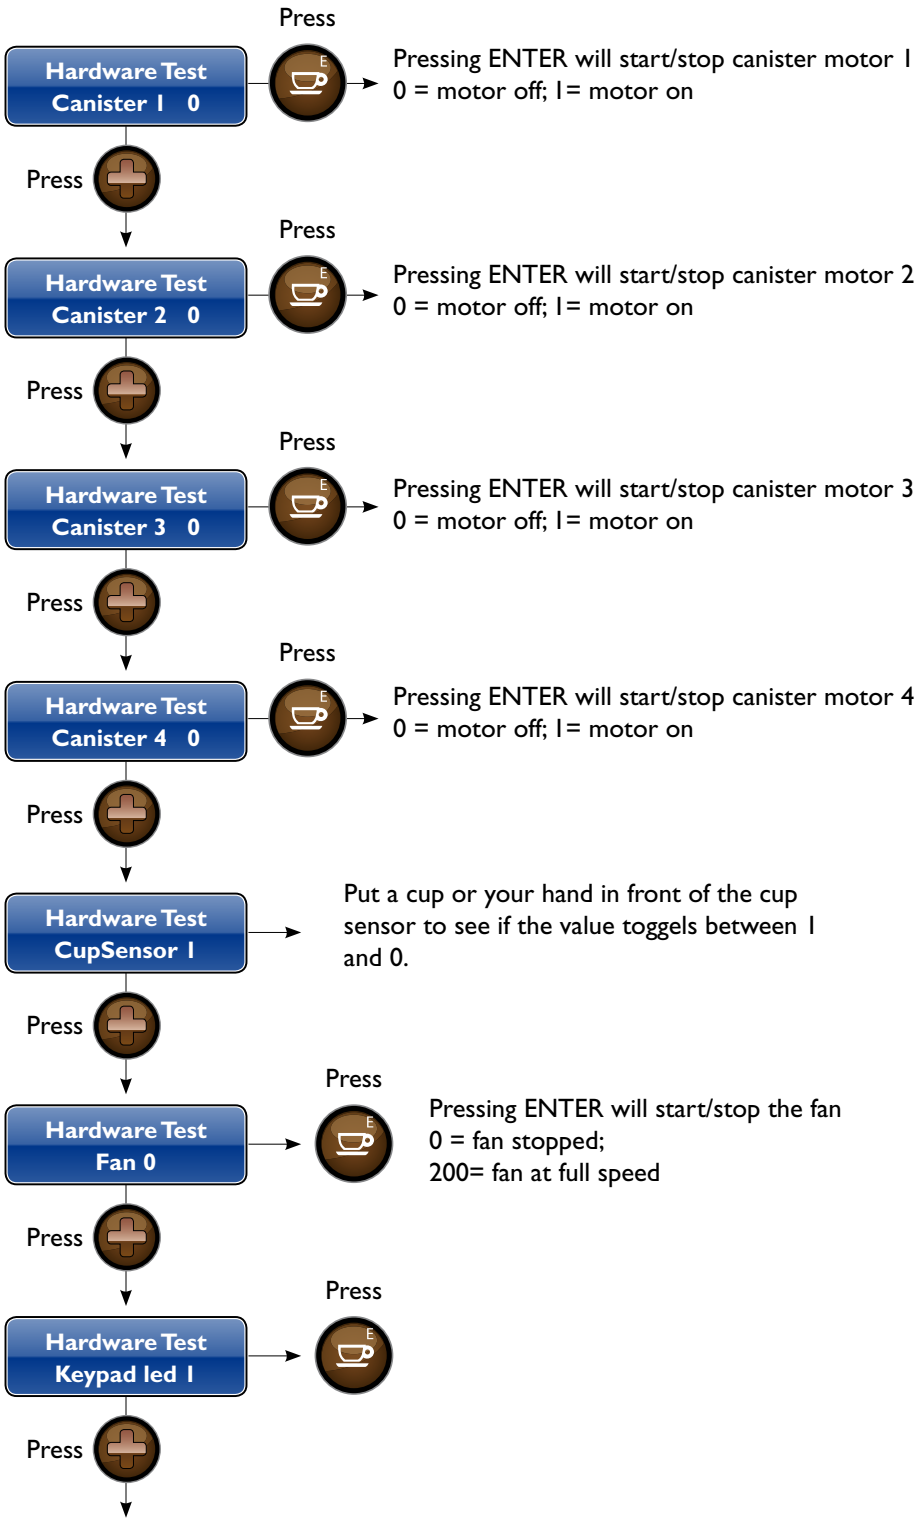

Freshbrew / Espresso

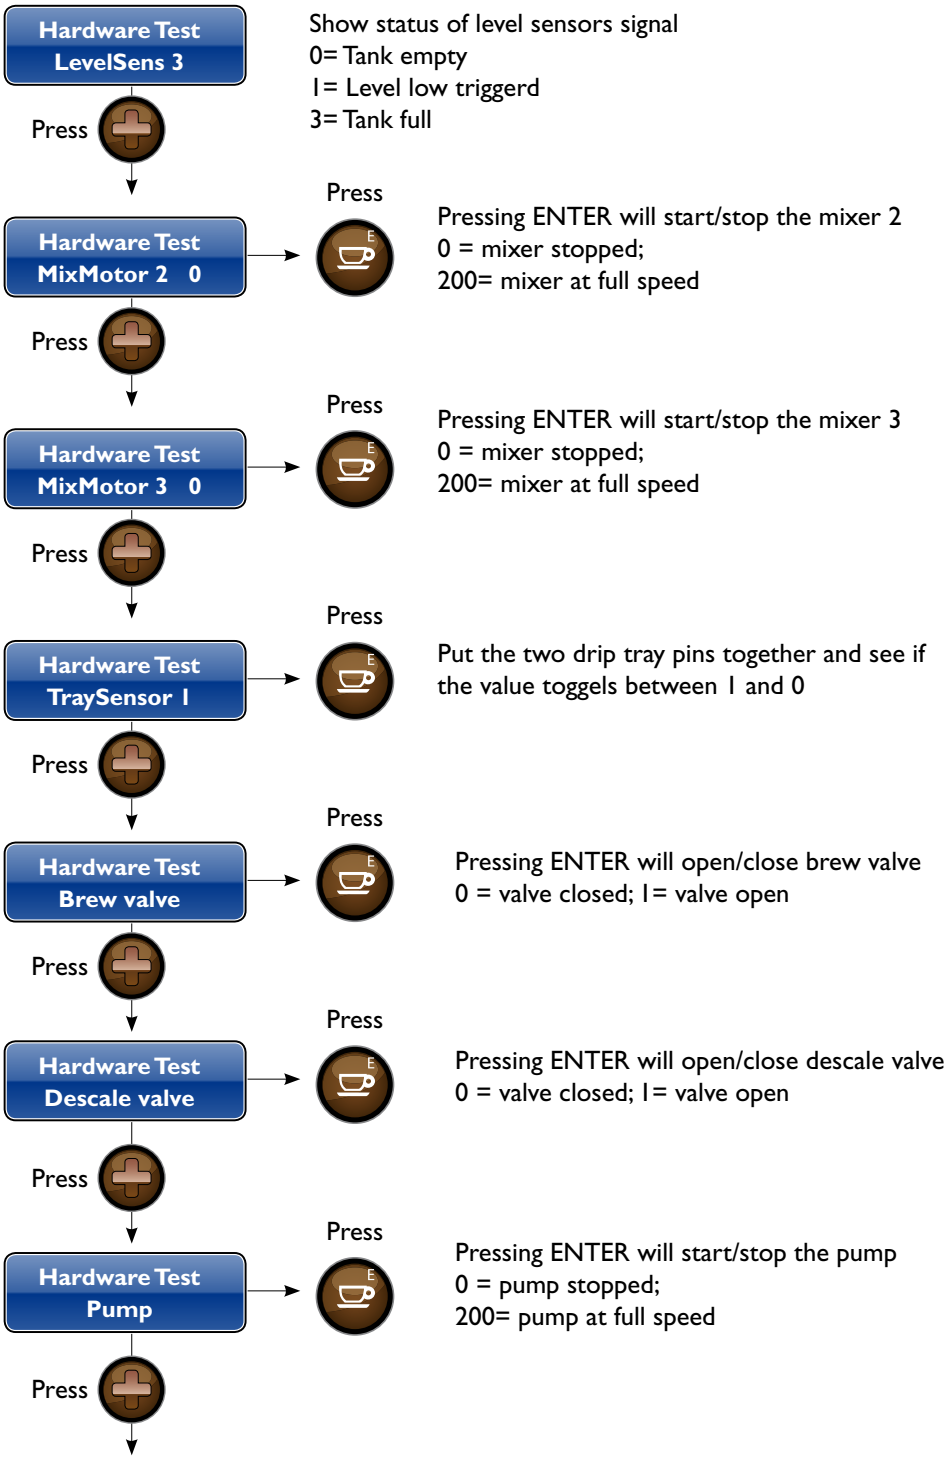

Freshbrew / Espresso

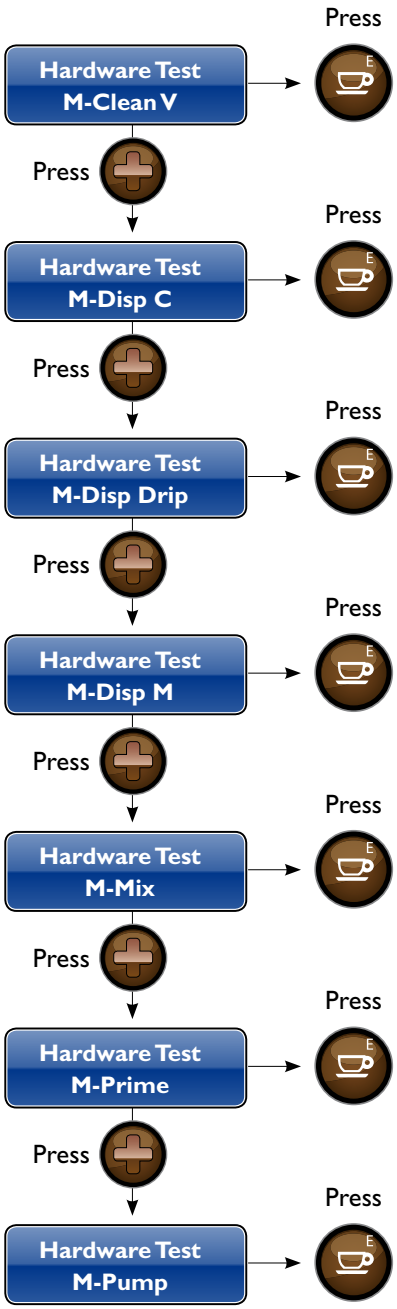

Pressing ENTER will open/close milk clean valve
0 = valve closed; 1= valve open

Pressing ENTER will open/close milk disp C valve
0 = valve closed; 1= valve open

Pressing ENTER will open/close milk direction valve
0 = valve closed; 1= valve open

Pressing ENTER will open/close milk cooler valve
0 = valve closed; 1= valve open

Pressing ENTER will start/stop the mixer
0 = stopped;
200= at full speed

Pressing ENTER will open/close milk prime valve
0 = valve closed; 1= valve open

Pressing ENTER will start/stop the milk pump
0 = pump stopped;
200= pump at full speed

Freshbrew / Espresso

Factory reset

How to perform a factory reset of the machine.

Service Menu
Factory Reset

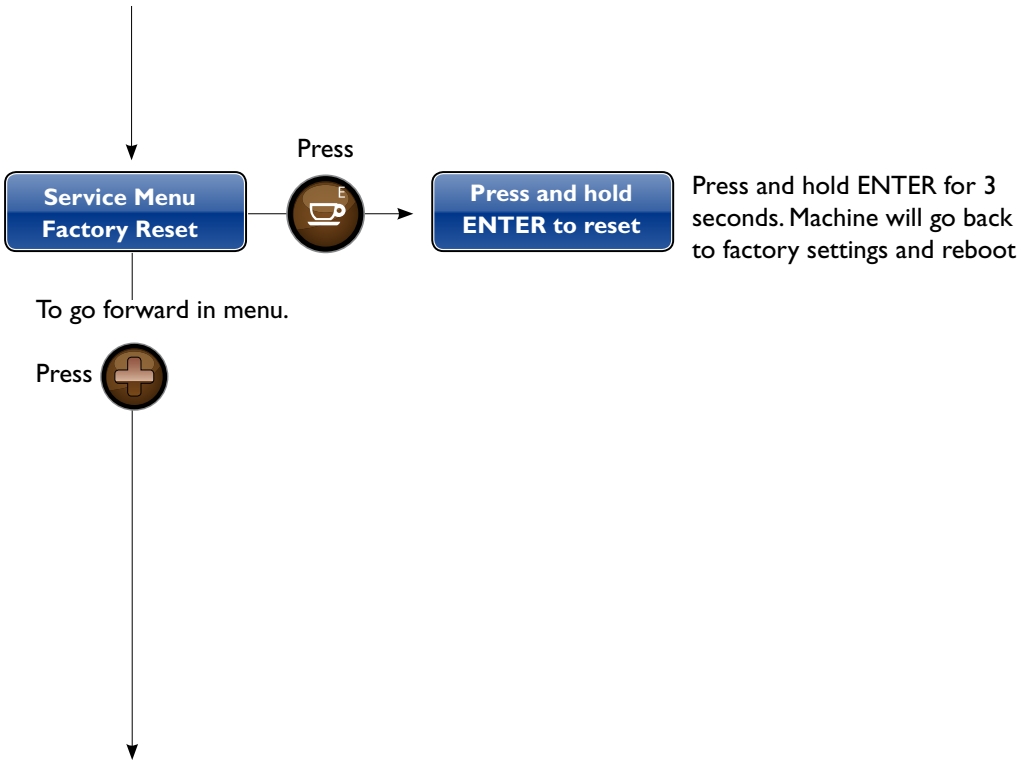
Press
Service Menu
Factory Reset
Press and hold
ENTER to reset
Press and hold ENTER for 3 seconds. Machine will go back to factory settings and reboot
To go forward in menu.
Press

Freshbrew / Espresso

Expert settings

Expert Settings of the machine.

Service Menu
Expert Settings

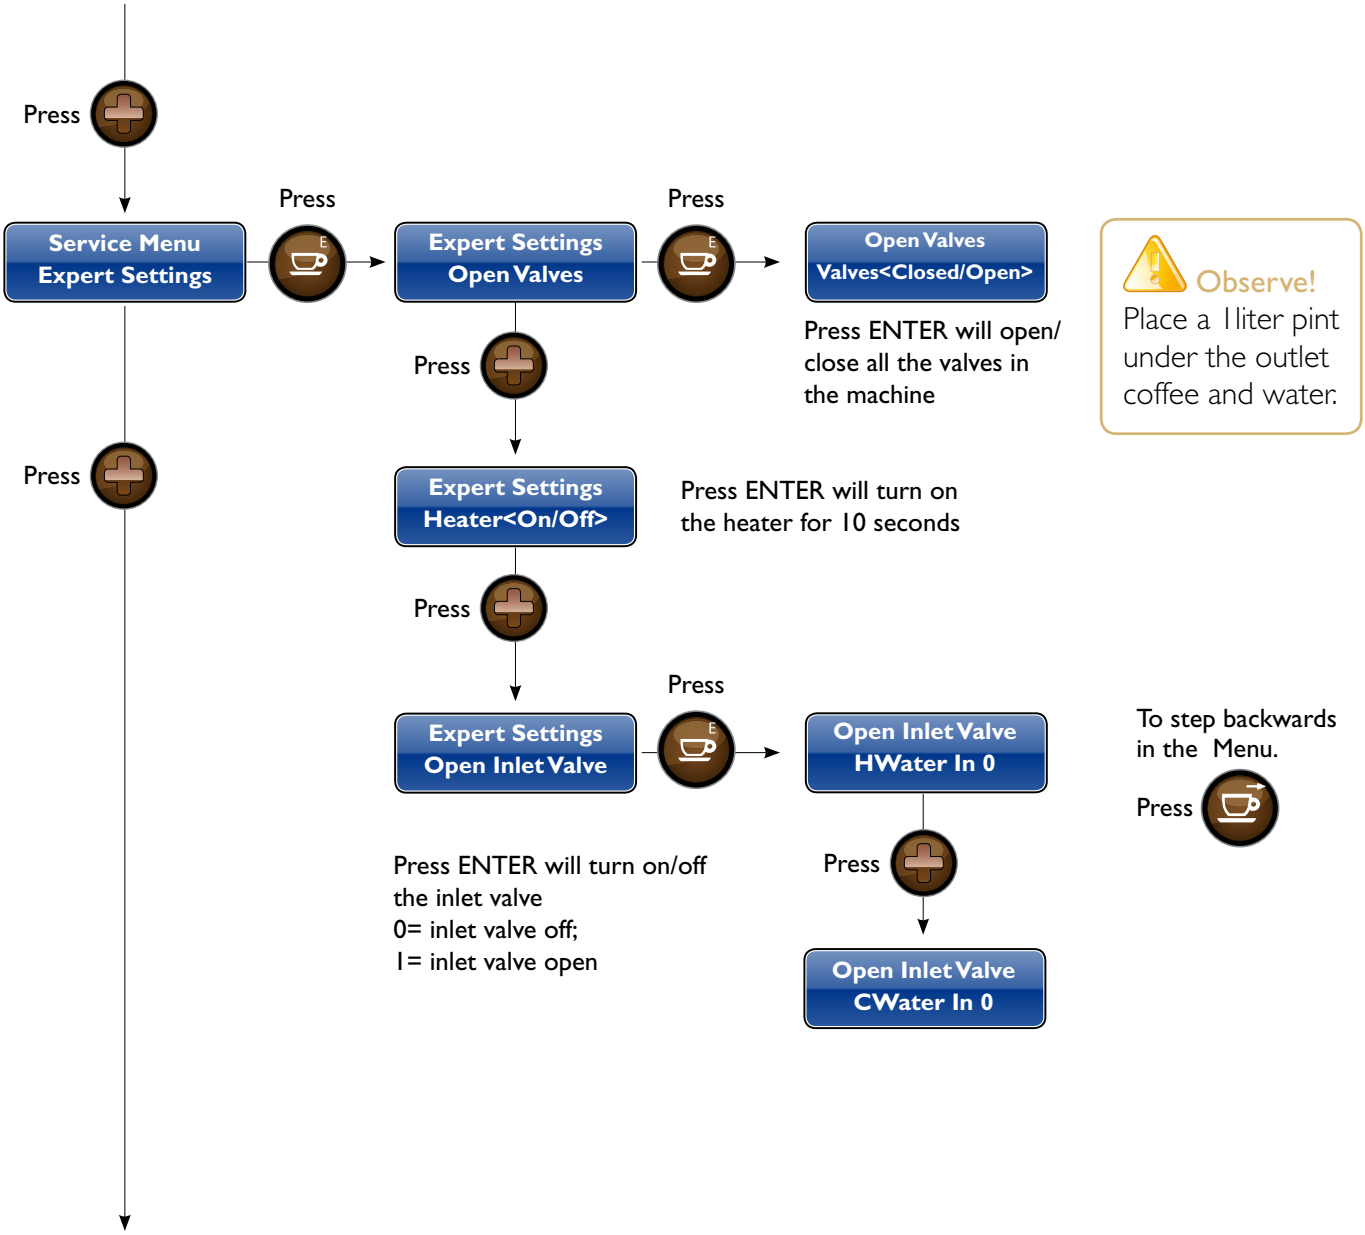

Freshbrew / Espresso

Time schedule (Energy Mode)

How to setup a schedule for energy mode and cleaning

Service Menu
Time Schedule

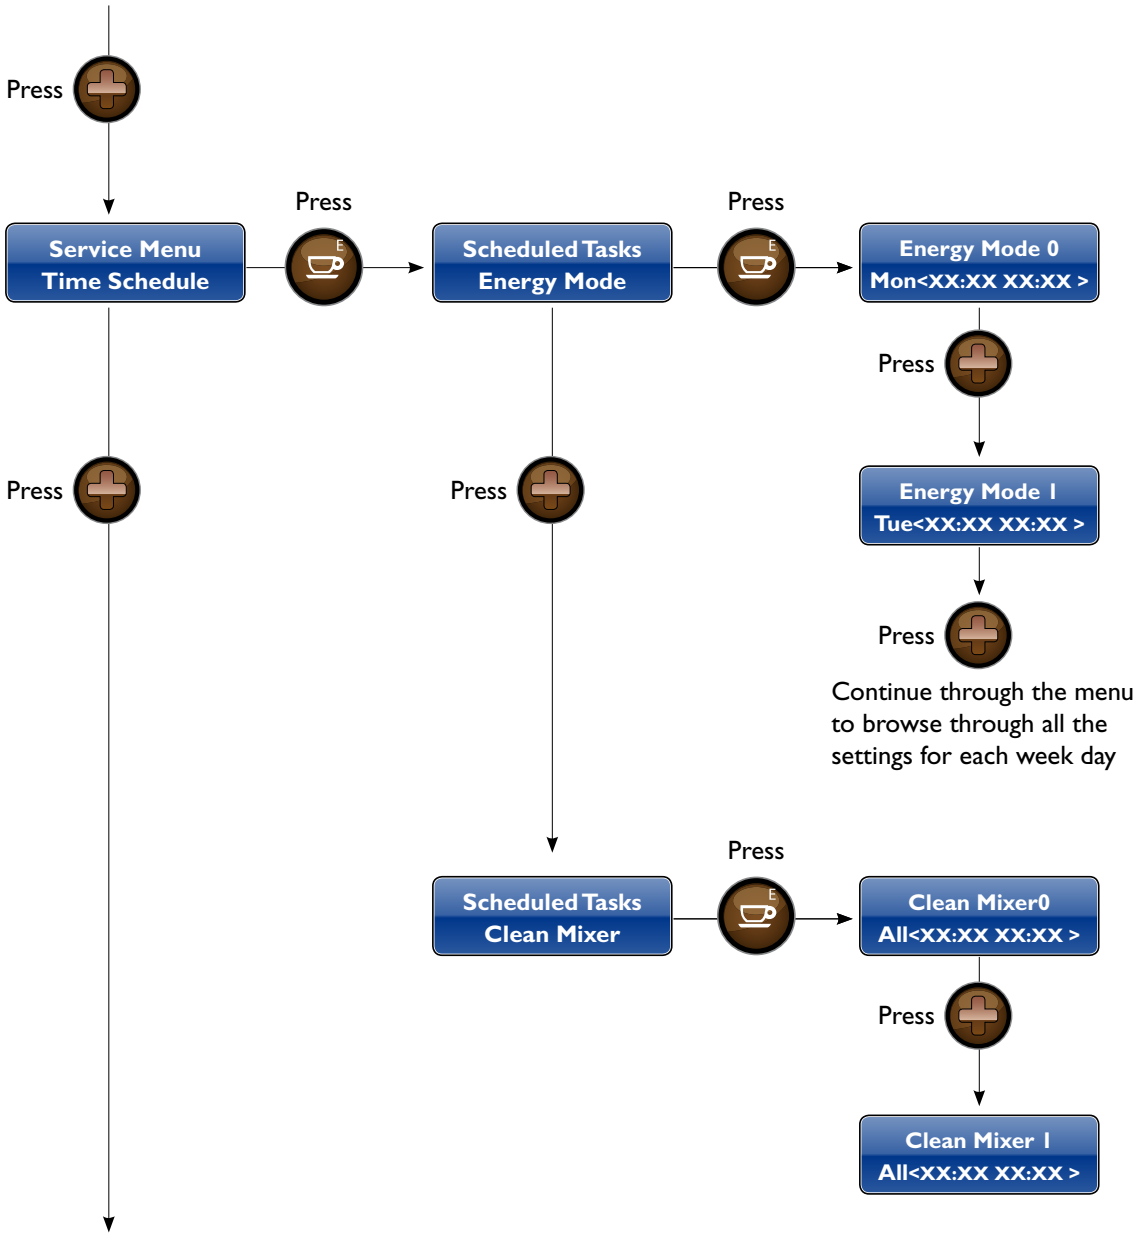

Freshbrew / Espresso

Pay system

Note! Only for machines with pay system.

These menus are included if the machine is equipped with pay system.

Service Menu
Free Vending

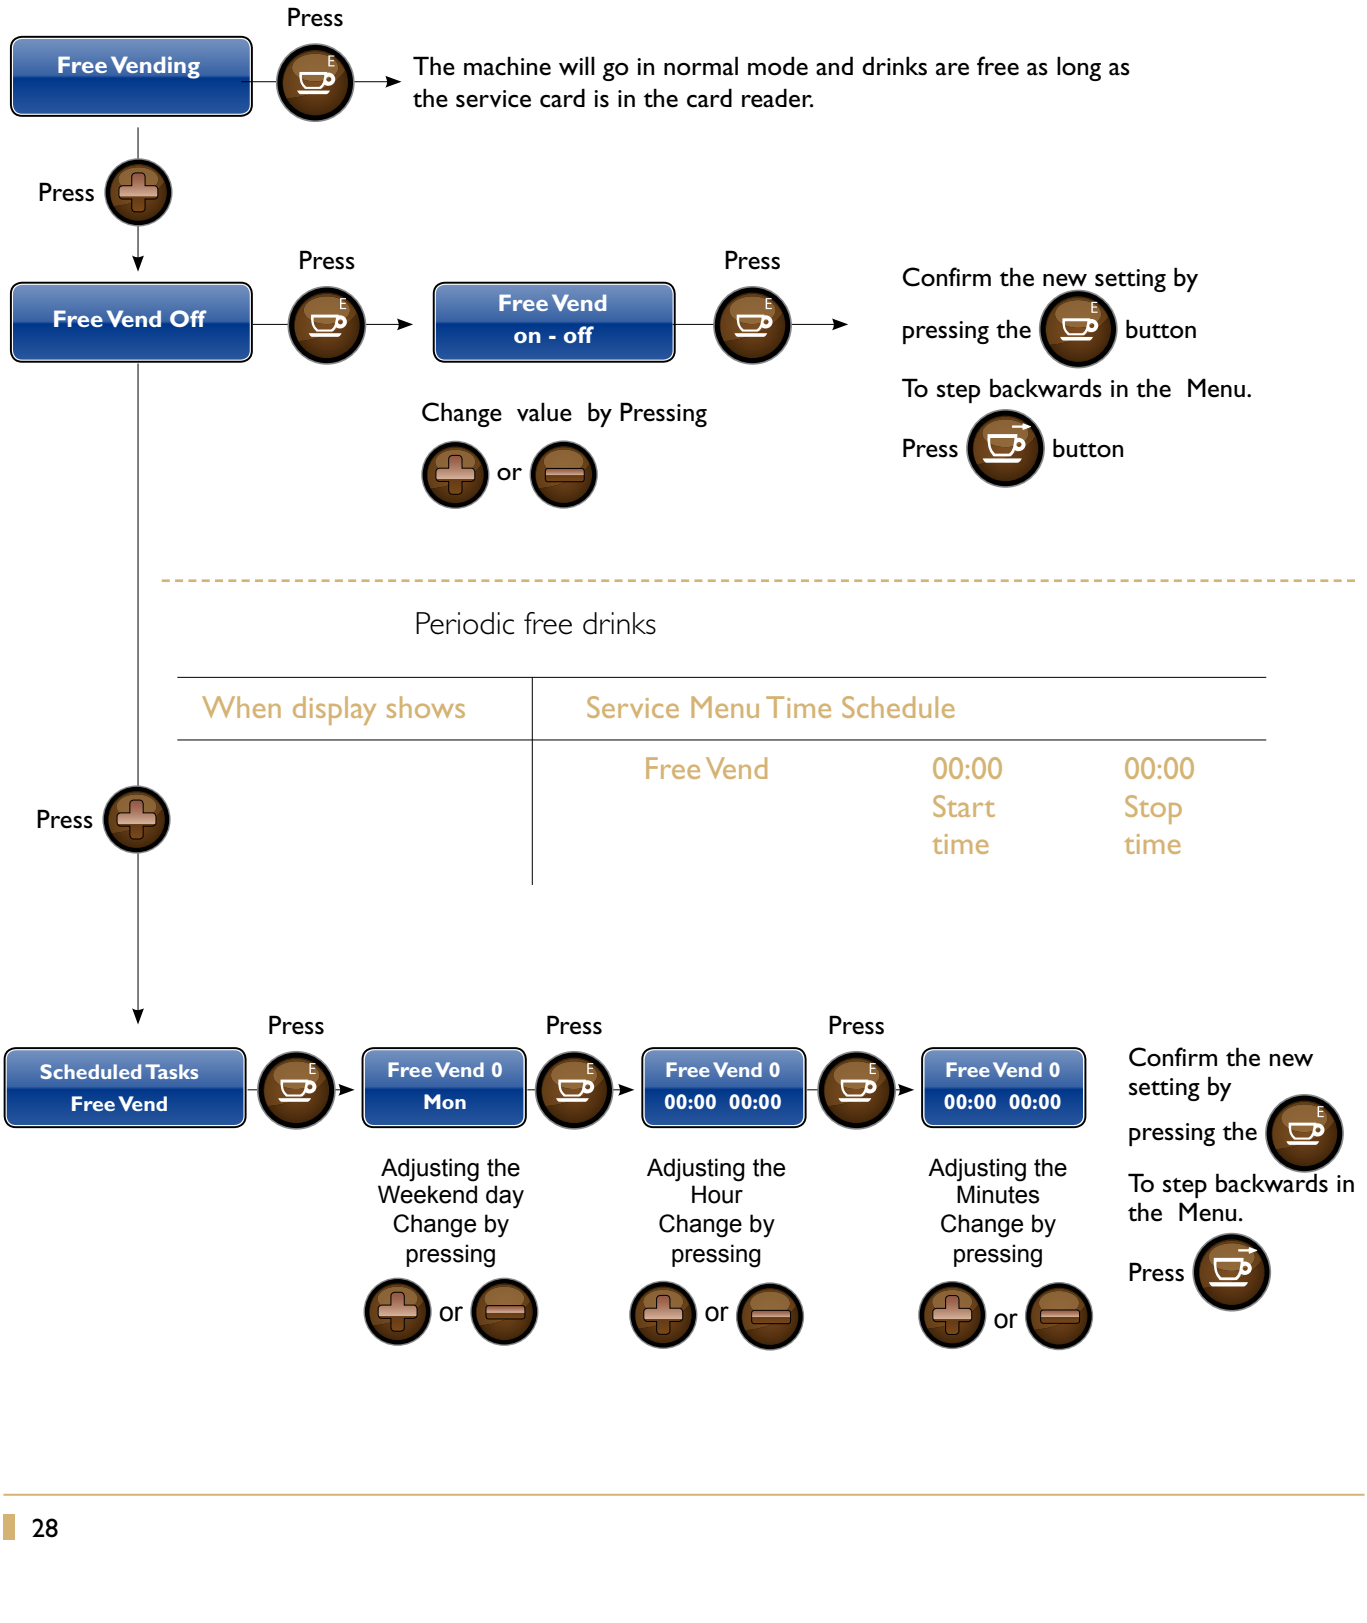

Freshbrew / Espresso

Cashflow

Note! Only for machines with pay system.

Change Service Menu Cashflow

Service Menu Cashflow

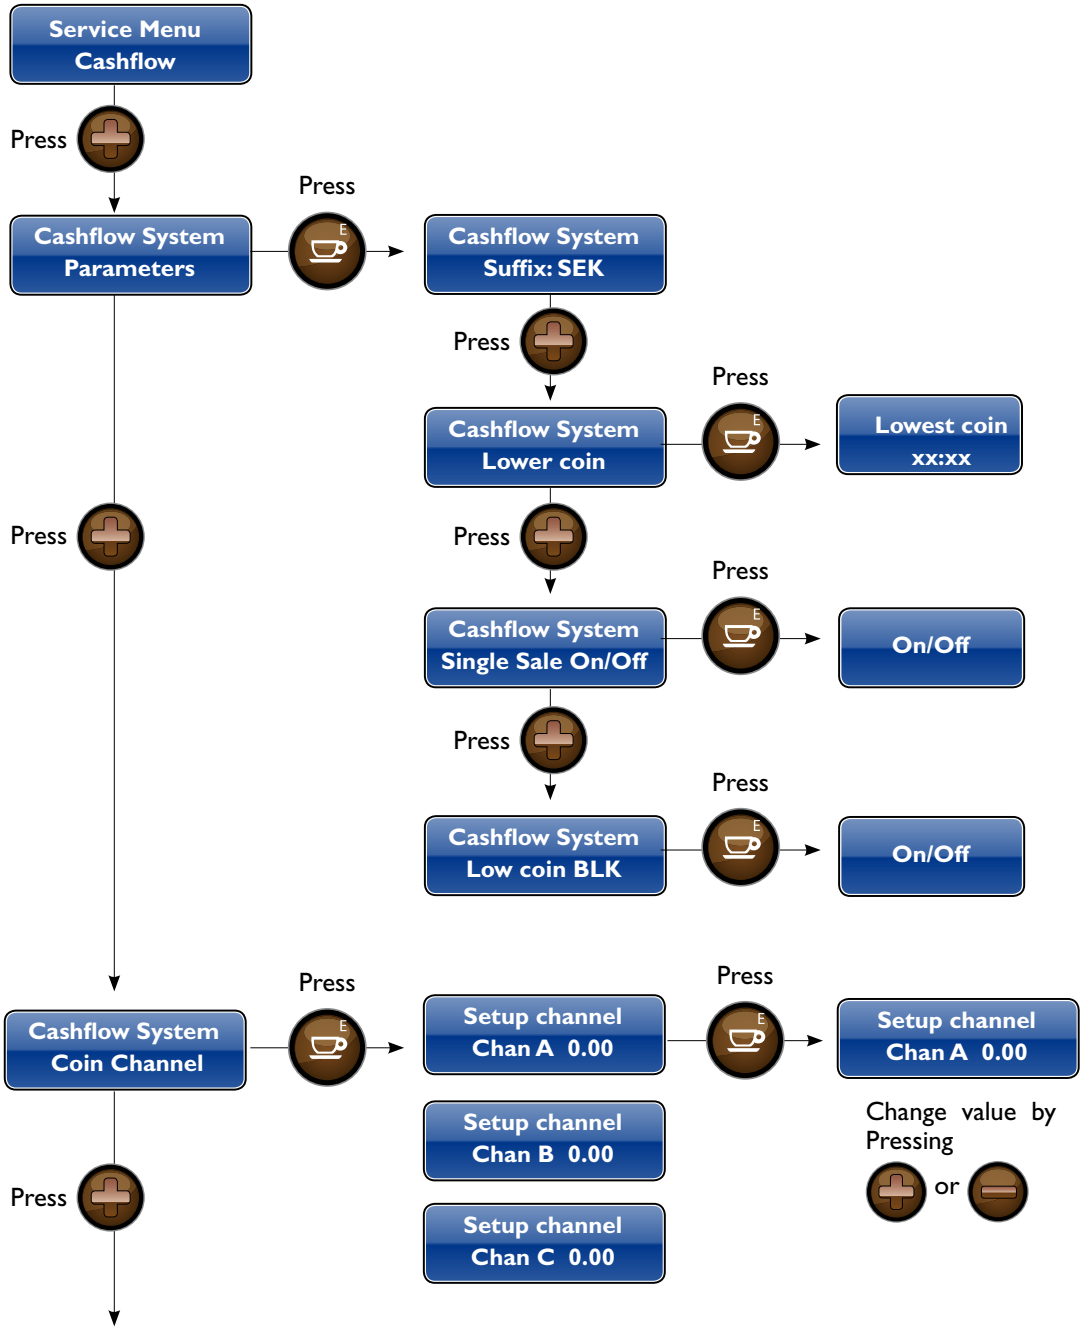

Freshbrew / Espresso

Cashflow

Note! Only for machines with pay system.

Change Service Menu Cashflow

Service Menu Cashflow

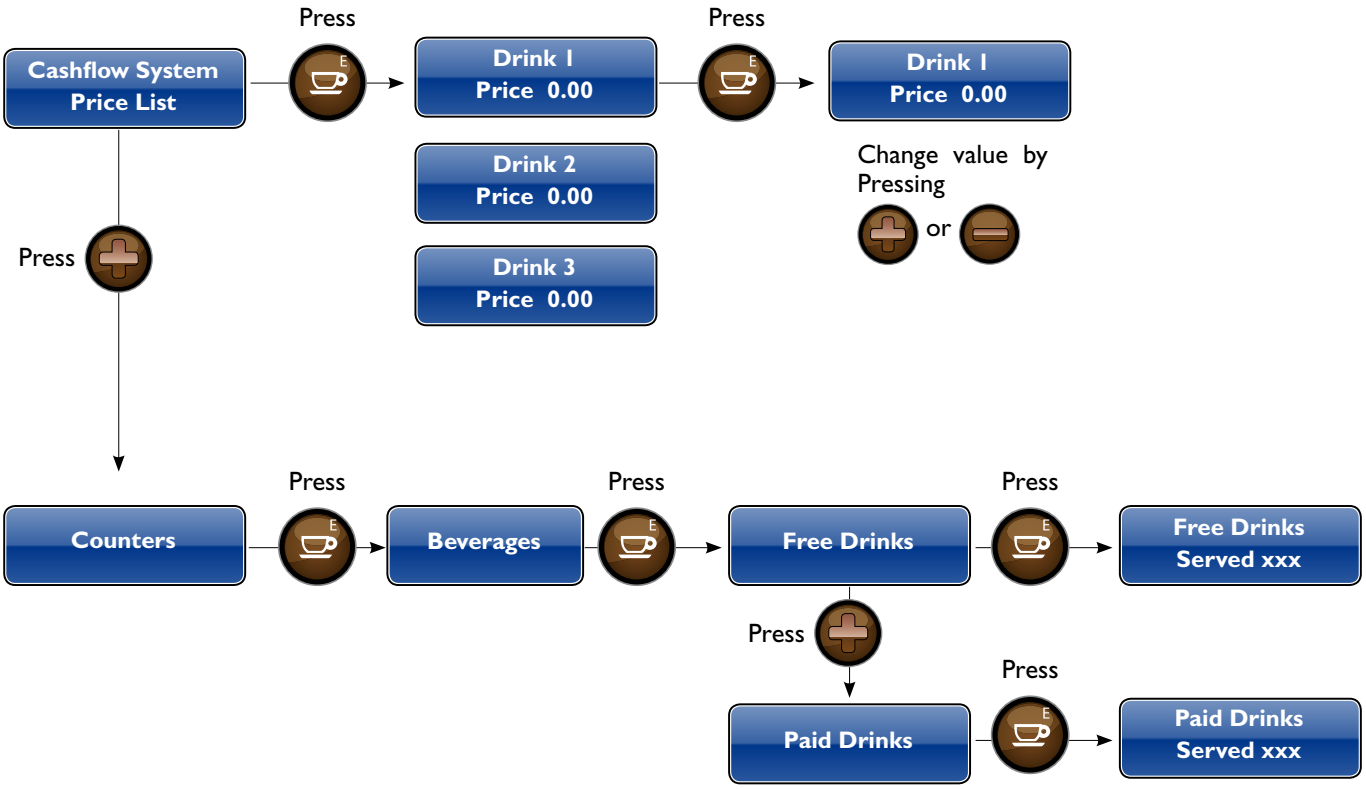

For the warranty to be valid the conditions for maintenance must have been followed according to our instructions, proper precaution has been made and warranty claim been issued without delay.
The affected equipment may not be used during awaiting service if there is any risk that the damage or defect would worsen.
The warranty will not cover consumption supplies such as glassware, normal maintenance such as cleaning of filters, contaminations in water, lime, incorrect voltages, pressure or adjustment of water amounts.
The warranty will not cover damages of defects caused by incorrect handling and operation of the appliance.

FOR SERVICE

Please contact your dealer

Your Dealer

crem®
INTERNATIONAL

www.creminternational.com